

OilReset_Renault_V1.00 Function List (Note:For reference only)

NOTES:

- This function is supported. ※ This function may be supported, which depends on the actual condition of the vehicle.
 - This function is not supported. ▲ This function is the new feature in this version.
- As for special function please refer to the special function table.

Vehicle Type	System Name	Ecu Info	Read Codes	Erase Codes	LiveData	Actuator	Function Test	Read Config	Special_Function
AVANTIME	INSTRUMENT PANEL	●	●	●	●	●	●	●	0011
CLIO 2	AUTOMATIC GEARBOX	●	●	●	●	●	●	※	0276, 0437, 0440, 0217, 0379, 0412, 0487, 0488, 0445, 0451, 0473, 0017, 0480, 0344, 0215, 0055, 0014, 0470, 0453, 0442, 0438
CLIO III	AUTOMATIC GEARBOX	●	●	●	●	●	●	○	0445, 0215, 0440, 0438, 0442
CLIO III	INJECTION	●	●	●	●	●	●	●	0112, 0277, 0271, 0310, 0439, 0123, 0187, 0274, 0206, 0353, 0441, 0247, 0114, 0220, 0007, 0008, 0455, 0060, 0462, 0117, 0496, 0497, 0492, 0494, 0491
CLIO III	INSTRUMENT PANEL	●	●	●	●	●	●	●	0194, 0041, 0156, 0066, 0368, 0348, 0088, 0069, 0238, 0337, 0298, 0204, 0052, 0302, 0058, 0312, 0245, 0265, 0442, 0357, 0221, 0223, 0222, 0224, 0147
CLIOIIP2/3/4	AUTOMATIC GEARBOX	●	●	●	●	●	●	※	0445, 0451, 0473, 0017, 0480, 0344, 0440, 0437, 0215, 0055, 0442, 0014, 0470, 0453, 0276, 0438, 0458
DUSTER	INJECTION	●	●	●	●	●	●	○	0187, 0441
DUSTER	AUTOMATIC GEARBOX	●	●	●	●	●	●	○	0445, 0215, 0440, 0442, 0438
ESPACE	INSTRUMENT PANEL	●	○	○	●	○	○	●	0067, 0364, 0400, 0429, 0196, 0303, 0226, 0225, 0390, 0421
ESPACE	AUTOMATIC GEARBOX	●	●	●	●	●	●	※	0276, 0437, 0440, 0217, 0379, 0412, 0487, 0488, 0445, 0451, 0473, 0017, 0480, 0344, 0215, 0055
ESPACE IV	INSTRUMENT PANEL	●	●	●	●	●	●	●	0369, 0195, 0152, 0088, 0066, 0349, 0339, 0344, 0025, 0069, 0348, 0370, 0238, 0213, 0158, 0358, 0359, 0235, 0236, 0178, 0442, 0085, 0156, 0005, 0204, 0245, 0243, 0083, 0227, 0068, 0230
ESPACEIV PH2	INSTRUMENT PANEL	●	●	●	●	●	●	●	0195, 0156, 0152, 0005, 0344, 0348, 0088, 0238, 0204, 0349, 0069, 0245, 0243, 0083, 0227, 0068, 0230, 0442, 0265
ESPACEIV PH2	INJECTION	●	●	●	●	●	●	●	0274, 0110, 0187, 0045, 0455, 0441, 0151, 0220
KANGOO	INJECTION	●	●	●	●	●	●	●	0277, 0218, 0179, 0079
KANGOO	AUTOMATIC GEARBOX	●	●	●	●	●	●	※	0276, 0437, 0440, 0217, 0379, 0412, 0487, 0488, 0445, 0451, 0473, 0017, 0480, 0344, 0215, 0055, 0014, 0470, 0453, 0442, 0438
KANGOO II	INJECTION	●	●	●	●	●	●	●	0112, 0271, 0277, 0123, 0324, 0060, 0187, 0246, 0220, 0247, 0114, 0007, 0008, 0455, 0465, 0441
KANGOO II	INSTRUMENT PANEL	●	●	●	●	●	●	●	0194, 0152, 0005, 0301, 0344, 0088, 0130, 0069, 0238, 0204, 0004, 0091, 0058, 0313, 0265, 0156, 0442, 0438, 0357, 0221, 0223, 0222, 0224, 0046, 0047, 0300, 0086
KANGOO II	AUTOMATIC GEARBOX	●	●	●	●	●	●	○	0445, 0215, 0440, 0442, 0438

Vehicle Type	System Name	Ecu Info	Read Codes	Erase Codes	LiveData	Actuator	Function Test	Read Config	Special_Function
KANGOO MUX	AUTOMATIC GEARBOX	●	●	●	●	●	●	※	0445, 0451, 0473, 0017, 0480, 0344, 0440, 0437, 0215, 0055, 0442, 0458, 0438, 0014, 0470, 0453, 0276
KANGOO ZE/STOPSTART/PH2	INSTRUMENT PANEL	●	●	●	●	●	○	○	0265, 0221, 0223, 0222, 0224
KANGOO ZE/STOPSTART/PH2	INJECTION	●	●	●	●	●	○	●	0187
KOLEOS/QM5	AUTOMATIC GEARBOX	●	●	●	●	○	●	○	0299
KOLEOS/QM5	INSTRUMENT PANEL	●	●	●	●	○	●	●	0085
KOLEOS/QM5	INJECTION	●	●	●	●	●	●	●	0187, 0220, 0045, 0455, 0441
LAGUNA	INSTRUMENT PANEL	●	●	●	●	○	●	●	0216, 0194, 0086, 0118
LAGUNA II	INSTRUMENT PANEL	●	●	●	●	※	●	●	0195, 0369, 0350, 0156, 0152, 0005, 0344, 0348, 0088, 0238, 0312, 0204, 0025, 0349, 0069, 0068, 0370, 0245, 0337, 0298, 0155, 0357, 0221, 0222, 0223, 0224, 0147, 0442, 0087, 0240, 0241, 0358, 0359, 0235, 0236, 0085
LAGUNA II	AUTOMATIC GEARBOX	●	●	●	●	●	●	●	0445, 0451, 0473, 0017, 0480, 0344, 0215, 0055, 0442, 0438, 0440
LAGUNA III	INSTRUMENT PANEL	●	●	●	●	●	○	●	0085, 0195, 0005, 0088, 0066, 0349, 0347, , 0069
LAGUNA III	INJECTION	●	●	●	●	※	○	●	0187, 0441, 0455, 0220, 0462
LAGUNA PHASE 2	INSTRUMENT PANEL	●	●	●	●	○	●	●	0216, 0194, 0086, 0118
LAGUNA PHASE 2	AUTOMATIC GEARBOX	●	●	●	●	●	●	○	0276, 0437, 0440, 0217, 0379, 0412, 0487, 0488
LAGUNAII PH2	INSTRUMENT PANEL	●	●	●	●	●	●	●	0195, 0369, 0350, 0156, 0152, 0005, 0344, 0348, 0088, 0238, 0312, 0204, 0025, 0349, 0069, 0068, 0370, 0245, 0337, 0298, 0155, 0357, 0221, 0222, 0223, 0224, 0147, 0442
LAGUNAII PH2	AUTOMATIC GEARBOX	●	●	●	●	●	●	○	0445, 0442, 0215, 0440
LATITUDE/SM5	INJECTION	●	●	●	●	※	○	●	0187, 0220, 0441, 0462
LOGAN	AUTOMATIC GEARBOX	●	●	●	●	●	●	○	0445, 0215, 0440, 0442, 0438
LOGAN	INJECTION	●	●	●	●	●	●	○	0187, 0441
MASTER III	INSTRUMENT PANEL	●	●	●	●	●	○	○	0265, 0221, 0223, 0222, 0224
MASTER III	INJECTION	●	●	●	●	●	○	○	0114, 0187, 0220, 0455, 0457, 0441, 0464, 0452
MASTER PH 3	INJECTION	●	●	●	●	●	●	●	0274, 0110, 0455, 0060, 0187, 0441, 0332, 0151, 0220, 0045, 0281
MEGANE II	INSTRUMENT PANEL	●	●	●	●	●	●	●	0194, 0369, 0156, 0152, 0066, 0344, 0348, 0088, 0069, 0238, 0298, 0442, 0221, 0222, 0041, 0368, 0337, 0204, 0052, 0302, 0058, 0312, 0245, 0357, 0223, 0224, 0147, 0265
MEGANE II	AUTOMATIC GEARBOX	●	●	●	●	●	●	○	0451, 0445, 0442, 0438, 0215, 0440
MEGANE II	INJECTION	●	●	●	●	●	●	●	0112, 0277, 0271, 0310, 0439, 0123, 0187, 0274, 0110, 0455, 0441, 0151, 0331, 0045, 0332
MEGANE/SCEN.	AUTOMATIC GEARBOX	●	●	●	●	●	●	※	0276, 0437, 0440, 0217, 0379, 0412, 0487, 0488, 0445, 0451, 0473, 0017, 0480, 0344, 0215, 0055, 0014, 0470, 0453, 0442, 0438
MEGANEIII/SCENICIII	INJECTION	●	●	●	●	※	○	●	0187, 0220, 0455, 0441, 0462, 0466, 0467, 0468, 0469, 0465, 0464
MEGANEIII/SCENICIII	INSTRUMENT PANEL	●	●	●	●	●	○	●	0085, , 0156, 0069, , 0195, 0005, 0088, 0066, 0349, 0347, 0223, 0219

Vehicle Type	System Name	Ecu Info	Read Codes	Erase Codes	LiveData	Actuator	Function Test	Read Config	Special_Function
MODUS	INSTRUMENT PANEL	●	●	●	●	●	●	●	0369, 0195, 0088, 0005, 0156, 0152, 0344, 0348, 0069, 0238, 0204, 0245, 0442, 0357, 0221, 0223, 0222, 0224, 0150, 0149, 0265
MODUS	AUTOMATIC GEARBOX	●	●	●	●	●	●	○	0445, 0215, 0440, 0438, 0442
MODUS	INJECTION	●	●	●	●	●	●	●	0112, 0277, 0271, 0310, 0439, 0123, 0187, 0274, 0206, 0353, 0441, 0462, 0117, 0496, 0497, 0492, 0494, 0491
NEW SM3/FLUENCE/MEGANE	INJECTION	●	●	●	●	※	○	●	0187, 0220, 0441, 0462, 0466, 0467, 0468, 0469, 0455, 0465
NEW SM3/FLUENCE/MEGANE	INSTRUMENT PANEL	●	●	●	●	●	○	●	0085
NEW SM3/FLUENCE/MEGANE	AUTOMATIC GEARBOX	●	●	●	●	●	○	○	0445, 0215, 0440, 0442, 0438
SANDERO	AUTOMATIC GEARBOX	●	●	●	●	●	●	○	0445, 0215, 0440, 0442, 0438
SANDERO	INJECTION	●	●	●	●	●	●	○	0187, 0441
SCENIC II	AUTOMATIC GEARBOX	●	●	●	●	●	●	○	0451, 0445, 0442, 0438, 0215, 0440
SCENIC II	INSTRUMENT PANEL	●	●	●	●	※	●	●	0194, 0025, 0369, 0156, 0152, 0066, 0344, 0348, 0088, 0069, 0238, 0442, 0221, 0222, 0245, 0357, 0223, 0224, 0265
SCENIC II	INJECTION	●	●	●	●	●	●	●	0112, 0277, 0271, 0310, 0439, 0123, 0187, 0274, 0110, 0455, 0441, 0151, 0331, 0045, 0332
THALIA/SYMB. 2	AUTOMATIC GEARBOX	●	●	●	●	●	●	※	0445, 0215, 0440, 0442, 0438, 0276
THALIA/SYMB. 2	INJECTION	●	●	●	●	●	●	○	0187, 0441
THALIA/SYMBL	AUTOMATIC GEARBOX	●	●	●	●	●	●	※	0276, 0437, 0440, 0217, 0379, 0412, 0487, 0488, 0445, 0451, 0473, 0017, 0480, 0344, 0215, 0055, 0014, 0470, 0453, 0442, 0438
TRAFICII P2/3	INJECTION	●	●	●	●	●	●	●	0274, 0110, 0455, 0187, 0441, 0151, 0220, 0045, 0060, 0332, 0281, 0247, 0114, 0461, 0007, 0008, 0457
TRAFICII P2/3	INSTRUMENT PANEL	●	●	●	●	●	●	●	0265, 0230
TWINGO II	INSTRUMENT PANEL	●	●	●	●	●	●	●	0156, 0152, 0344, 0088, 0069, 0238, 0312, 0302, 0130, 0116, 0265, 0442, 0148, 0230
TWINGO II	INJECTION	●	●	●	●	●	●	●	0274, 0187, 0206, 0353, 0441
VEL Satis	INSTRUMENT PANEL	●	●	●	●	●	●	●	0369, 0195, 0087, 0349, 0240, 0241, 0358, 0359, 0235, 0236, 0442, 0085, 0312, 0350, 0156, 0152, 0005, 0344, 0348, 0088, 0238, 0204, 0025, 0069, 0068, 0229, 0231, 0228, 0244, 0370, 0245, 0337, 0298, 0357, 0221, 0222, 0223, 0224, 0147
VELSatis PH2	INSTRUMENT PANEL	●	●	●	●	●	●	●	0195, 0369, 0350, 0156, 0152, 0005, 0344, 0348, 0088, 0238, 0312, 0204, 0025, 0349, 0069, 0068, 0229, 0231, 0228, 0244, 0370, 0245, 0337, 0298, 0357, 0221, 0222, 0223, 0224, 0442, 0147
VELSatis PH2	INJECTION	●	●	●	●	●	●	●	0274, 0110, 0187, 0045, 0455, 0441, 0151
WIND	INJECTION	●	●	●	●	●	●	●	0274, 0187, 0206, 0353, 0441

Specil_Function

Index	Specil Function Name	Index	Specil Function Name
0001	3-button key	0251	Passenger front air bag circuit 1
0002	Abs type	0252	Passenger front air bag circuit 2
0003	Abs/esp calibration	0253	Passenger lap strap pretensioner
0004	Adac configuration	0254	Passenger presence detection sensor
0005	Adac display type	0255	Passenger side rear frontal airbag
0006	Adaptive value - a/f ratio	0256	Passenger side rear strap sensor
0007	Adaptives after regenerating particle filter	0257	Passenger's front airbag
0008	Adaptives after replacing cabin filter	0258	Passenger's front buckle pretensioner
0009	Adaptives on egr valve fault	0259	Passenger's front inertia reel
0010	Additional heating	0260	Passenger's front side impact sensor
0011	Adjust oil change counter	0261	Passenger's lap strap/seat airbag
0012	Aerial test	0262	Passenger's lateral sensor
0013	Air conditioning	0263	Passenger's seat buckle sensor
0014	Air conditioning connection fault finding	0264	Passenger's side rear inertia reel
0015	Air conditioning programming	0265	Personalised oil change frequency
0016	Air conditioning type	0266	Petrol injection
0017	Air conditioning with wire connection	0267	Power assisted steering
0018	Air path programming	0268	Power steering electric pump unit
0019	Alarm	0269	Power-assisted steering program
0020	Alternator type	0270	Preheating prevention
0021	Auto locking warning sound	0271	Pressure regulation adaptives
0022	Auto stop lights illumination authorisation	0272	Prevention of electrical consumers
0023	Automatic closing of windows (by card)	0273	Prevention of stop light auto illumination
0024	Automatic folding of door mirrors	0274	Programmed values
0025	Automatic handbrake	0275	Programming a valve code
0026	Automatic lighting function	0276	Programming of no load and full load positions
0027	Automatic locking when driving	0277	Programming reinitialization
0028	Automatic relocking	0278	Programming the codes of the four valves
0029	Automatic seat recall	0279	Programming with 1 key
0030	Automatic wiping function	0280	Programming with 2 keys
0031	Avantime (f4r): with heated windscreen	0281	Pump pressure regulator type
0032	Avantime (f4r): without heated windscreen	0282	Rain sensor
0033	Avantime(except f4r):with heated windscr.	0283	Rain/light sensor
0034	Avantime(expt f4r):without heated windscr.	0284	Rain/luminosity sensor type
0035	B/c with fr/rr thorax + head airbags	0285	Raising of elect. window(with anti-pinch)
0036	B/c with front thorax + head airbags	0286	Read speedo index
0037	B/c without side airbags	0287	Read vehicle parameters
0038	Behr probe configuration	0288	Reading impact contexts
0039	Bleed hydraulic unit and braking circuits	0289	Rear access aerials
0040	Bleeding the braking system	0290	Rear inertia reels
0041	Bodywork type	0291	Rear left-hand inertia wheel
0042	Boiler	0292	Rear right-hand inertia reel
0043	Brake pressure offset sensor	0293	Rear screen wiper
0044	Buzzer volume	0294	Rear shelves
0045	Cabin filter regeneration	0295	Rear thorax side air bag, driver side
0046	Calibr. entry lev. instr. panel fuel gauge	0296	Rear thorax side air bag, passenger side
0047	Calibr. mid/top range instr. panel fuel gauge	0297	Remote control cruise control
0048	Calibration	0298	Reserve capacity
0049	Card battery charge tester	0299	Reset oil change counter
0050	Card locking	0300	Restart the computer
0051	Card reminder warning	0301	Rev counter
0052	Card/key	0302	Rheostat presence
0053	Change in triggering limit	0303	Right hand drive
0054	Chassis wear programming	0304	Right hand drive / 4 cylinder configuration
0055	Check motor torque by abs	0305	Right hand drive / 6 cylinder configuration
0056	Check target teeth	0306	Right hand drive / diesel configuration
0057	Childproof lock	0307	Right-hand curtain airbag
0058	Clock	0308	Right-hand side impact sensor
0059	Coded diesel solenoid valve engine immobiliser	0309	Save clutch pedal programming
0060	Commercial vehicle idle speed modification	0310	Save computer data
0061	Comp configuration	0311	Seat belt light

Index	Specil Function Name	Index	Specil Function Name
0062	Compressor type	0312	Seat belt reminder buzzer
0063	Config. without recycling flap auto-setting	0313	Seat belt warning module
0064	Configuration of system components	0314	See-me-home lighting
0065	Configuration with recycling flap auto-setting	0315	Selection of valve set
0066	Consumption measurement units	0316	Selective opening of doors
0067	Control panel type	0317	Sensor offsets
0068	Cruise contr./sp. limit. speed diff.	0318	Side on which steering wheel fitted
0069	Cruise ctrl/spd limiter	0319	Side sensor configuration
0070	Cruise ctrl/speed limiter	0320	Side sensors programming
0071	Curtain side air bag, driver's side	0321	Siemens probe configuration
0072	Curtain side air bag, passenger side	0322	Slope sensor adjustment
0073	Cylinder 1 injector code	0323	Special notes on commercial vehicles
0074	Cylinder 2 injector code	0324	Speed limiter
0075	Cylinder 3 injector code	0325	Speedo index
0076	Cylinder 4 injector code	0326	Steering angle offset
0077	Daytime running lights	0327	Steering angle sensor initialization
0078	Deadlocking	0328	Steering wheel angle offset sensor
0079	Decrement idle speed	0329	Steering wheel angle sensor
0080	Diesel engine immobiliser	0330	Steering wheel angle sensor programming
0081	Diesel injection	0331	Stop electrical consumer prevention
0082	Diesel/petrol eng immob without coded sol valve	0332	Stop fuel supply prevention
0083	Directional headlights	0333	Stop preheating prevention
0084	Discharge lamp	0334	Stored energy management data
0085	Distance before next oil change	0335	Sunroof
0086	Distance before next oil change configuration	0336	Tailgate flap
0087	Distance regulator	0337	Tank capacity
0088	Distance units	0338	Temperature display
0089	Door unlocking mode	0339	Temperature units
0090	Drive ratio	0340	Thermoplungers
0091	Drive type configuration	0341	Timer courtesy light
0092	Driver front air bag circuit 1	0342	Tone adjustment
0093	Driver front air bag circuit 2	0343	Toxicity sensor
0094	Driver lap strap pretensioner	0344	Trajectory control
0095	Driver's side rear frontal airbag	0345	Transverse acceleration offset sensor
0096	Driver's front airbag	0346	Type of power steering
0097	Driver's front buckle pretensioner	0347	Tyre pressure monitor function
0098	Driver's front inertia reel	0348	Tyre pressure monitoring
0099	Driver's front side impact sensor	0349	Tyre pressure units
0100	Driver's lap strap/seat airbag	0350	Uch
0101	Driver's lateral sensor	0351	Uch connections test -> card reader
0102	Driver's seat buckle sensor	0352	Unlock computer
0103	Driver's seat position sensor	0353	Unlock injector control
0104	Driver's seat sensor	0354	Unlock passenger's front air bag
0105	Driver's side rear inertia reel	0355	Unlocking mode. doors hands free
0106	Driver's side rear strap sensor	0356	Upc comp. type
0107	Driving type	0357	Update odometer
0108	E with side airbags	0358	V4y automatic gearbox
0109	E without side airbags	0359	V4y manual
0110	Ecu memory	0360	Valve set selection
0111	Eeprom probe configuration	0361	Van fast idle speed decrease
0112	Egr adaptives	0362	Van fast idle speed increase
0113	Egr programming	0363	Veh. speed at initialization
0114	Egr valve programming	0364	Vehicle engine type
0115	Electric child safety	0365	Vehicle family
0116	Electric power assisted steering	0366	Vehicle function programming
0117	Engine adaptives	0367	Vehicle parameters
0118	Engine immobiliser 2	0368	Vehicle speed signal transmitter
0119	Engine parameter adaptives	0369	Vehicle type
0120	Engine type	0370	Voice synthesiser
0121	Engine/gearbox type	0371	W fr chest airbags w/out head-lvl airbags
0122	Enter recommended pressures	0372	Windscreen type
0123	Enter vin code	0373	Wiper intermittent speed ring
0124	Erase obd fault memory	0374	With abs
0125	Esp automatic reconnection threshold	0375	With ac (fixed capacity compressor)

Index	Specil Function Name	Index	Specil Function Name
0126	Esp sensor programming	0376	With ac (variable capacity compressor)
0127	Espace: with evaporator sensor	0377	With air bag
0128	Espace: without evaporator sensor	0378	With air con / without heated windscreen
0129	Evaporator temperature sensor	0379	With air conditioning
0130	External temperature	0380	With air conditioning / with heated windscreen
0131	External temperature sensor	0381	With automatic transmission
0132	Fault memory	0382	With boiler
0133	Flashing buzzer	0383	With catalytic converter
0134	Flywheel angle offset reading	0384	With coolant sensor
0135	Following tyre change	0385	With cruise control
0136	Front buckle pretensioners	0386	With evaporator temperature sensor
0137	Front fog lights	0387	With fr chest airbags+head-level airbags
0138	Front left-hand buckle pretensioner	0388	With fuel pump cut-out
0139	Front left-hand chest-level side airbag	0389	With harrison type compressor
0140	Front left-hand inertia wheel	0390	With hazard lamps recall on trf
0141	Front right-hand buckle pretensioner	0391	With heated rear screen
0142	Front right-hand chest-level side airbag	0392	With infra-red remote control
0143	Front right-hand inertia wheel	0393	With manual gearbox
0144	Front seat belt retractors	0394	With one-touch type control
0145	Front thorax side air bag, driver side	0395	With passenger's airbag
0146	Front thorax side air bag, passenger side	0396	With passenger's airbags
0147	Fuel gauge calibration	0397	With permanent type control
0148	Fuel level display update	0398	With power assisted steering
0149	Fuel sender calibration (doi).	0399	With power steering electric pump unit
0150	Fuel sender calibration (europe)	0400	With radio display
0151	Fuel supply prevention	0401	With radio frequency remote control
0152	Fuel type	0402	With recycling motor timer
0153	G/s with head airbags	0403	With sanden type compressor
0154	G/s without head airbag	0404	With self levelling suspension
0155	Gas reserv. capac.	0405	With side airbags
0156	Gearbox type	0406	With swirl flap
0157	Geographical zone	0407	With thermoplungers
0158	Hands free	0408	With timed courtesy light
0159	Hands free locking	0409	Without air bag
0160	Hands-free function	0410	Without air con / with heated windscreen
0161	Hands-free start-up	0411	Without air con. / without heated windscreen
0162	Hands-free system test	0412	Without air conditioning
0163	Hazard lamps recall on trf	0413	Without airbags (pretensioners only)
0164	Hazard warning lights illumination by abs	0414	Without automatic transmission
0165	Headlight washers	0415	Without boiler
0166	Heated windscreen	0416	Without catalytic converter
0167	Heating resistor type	0417	Without coolant sensor
0168	Hokuriku probe configuration	0418	Without cruise control
0169	Hydraulic brake compensation	0419	Without evaporator temperature sensor
0170	Idle air volume learning - factory mode	0420	Without fuel pump cut-out
0171	Idle air volume learning - service mode	0421	Without hazard lamps recall on trf
0172	Idle speed setting decrementation	0422	Without heated rear screen
0173	Idle speed setting incrementation	0423	Without inhibition switch
0174	Igniters in series configuration	0424	Without passenger seat
0175	Ignition module configuration	0425	Without passenger's airbag
0176	Ignition timing adjustment	0426	Without passenger's frontal airbag
0177	Impact information connection	0427	Without power assisted steering
0178	Increase fuel warning threshold	0428	Without power steering electric pump unit
0179	Increment of idle speed	0429	Without radio display
0180	Inhibition of selective door opening	0430	Without recycling motor timer
0181	Injection prohibition	0431	Without self levelling suspension
0182	Injector cylinder 1	0432	Without side airbags
0183	Injector cylinder 2	0433	Without swirl flap
0184	Injector cylinder 3	0434	Without thermoplungers
0185	Injector cylinder 4	0435	Without timed courtesy light
0186	Interior lighting	0436	Write clutch pedal programming
0187	Interval of oil change (ocs) oxidation	0437	Write date of after sales operation
0188	J without side airbags	0438	Write date of last after sales operation
0189	J with side ab w/o rear chest ab	0439	Write saved data
0190	K/l with f chest + curt airbags	0440	Write transmission oil change date

Index	Specil Function Name	Index	Specil Function Name
0191	K/l with f/r chest + curt airbags	0441	Write v. i. n.
0192	K/l without side airbags	0442	Write vin
0193	Key type	0443	Actuators sequential control
0194	Language configuration	0444	Assisted engagement when stationary
0195	Language version.	0445	Auto-adaptives
0196	Left hand drive	0446	Brake lining friction learning
0197	Left hand drive / 4 cylinder configuration	0447	Caravan towing distance
0198	Left hand drive / 6 cylinder configuration	0448	Clutch initial closed position
0199	Left hand drive / diesel configuration	0449	Compressor feedback
0200	Left-hand curtain airbag	0450	Computer reinitialization
0201	Left-hand drive	0451	Converter lock up adaptive
0202	Left-hand side impact sensor	0452	Egr bypass programming
0203	Light sensor sensitivity	0453	Engine torque control function
0204	Lights automatic illumination	0454	Enter injector calibration data
0205	Lock computer	0455	Enter injector codes
0206	Lock injector control	0456	Erase auto-adaptive values
0207	Lock latch locking	0457	Fast idle speed modification
0208	Lock passenger's front air bag	0458	Fault/s memorised
0209	Longitudinal acceleration sensor	0459	Front buzzer volume
0210	Longitudinal acceleration sensor offset	0460	Front tone setting
0211	Memorising driver's seat position	0461	Idle speed reference
0212	Memory saved	0462	Ignition coil adaptive
0213	Navigation system	0463	Initialization after automatic configuration
0214	No abs	0464	Injection pump adaptatives
0215	Note oil wear counter	0465	Injector adaptives
0216	Number of cylinders configuration	0466	Injector adaptives no. 1
0217	Oil change counter offset	0467	Injector adaptives no. 2
0218	Oil change counter reset	0468	Injector adaptives no. 3
0219	Oil change frequency	0469	Injector adaptives no. 4
0220	Oil change interval (ocs): dilution	0470	Lever locking connection fault finding
0221	Oil change interval in km	0471	Memorization of n1 and f1 positions (engine stopped)
0222	Oil change interval in months	0472	Neutral position programming
0223	Oil change range: current value in km	0473	Obd memory
0224	Oil change range: current value in months	0474	Preparation before automatic configuration
0225	Oil level displayed 20 sec when adac pressed	0475	Program clutch open position
0226	Oil level displayed 20sec	0476	Programme slip point
0227	Oil measurement	0477	Programming selection/engaging zones
0228	Oil measurement timer	0478	Rear brake unit initialization
0229	Oil pressure warning threshold	0479	Rear brake unit repositioning
0230	Oil service and odometry miles - km	0480	Selector lever locking
0231	Oil temperature measurement threshold	0481	Sensor type
0232	One-touch electric window(s)	0482	Shoe lining energy counter
0233	One-touch electric window(s) / sunroof	0483	Slope initialization
0234	Opening elements central locking	0484	Vehicle configuration
0235	Other at	0485	Vehicle identification
0236	Other manual	0486	Vehicle speed limitation function
0237	Overspeed alarm for arabia	0487	With obd
0238	Overspeed function - arabia	0488	Without obd
0239	Oxygen sensor test	0489	Write clutch initial closed position
0240	P9x at	0490	Write date new clutch fitted
0241	P9x manual	0491	Cruise control/speed limiter programming
0242	Parametrage prive 1	0492	Flywheel target programming
0243	Parking aid	0493	High pressure circuit leak test
0244	Parking proximity sensor function	0494	Pinking sensor programming
0245	Particle filter	0495	Pressure sensor
0246	Particle filter adaptives	0496	Programming throttle limits
0247	Particle filter relative pressure sensor	0497	Richness regulation programming
0248	Pass airbag deactivation warning light	0498	Static/autoconfiguration test
0249	Passenger air bag locking mode	0499	Transverse acceleration sensor
0250	Passenger compartment heating resistor		