



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
		Driver and Chassis	CAS [Car Access System]	✓	✓	✓	✓	✓	-
			DDE [Diesel Electronics]	✓	✓	✓	✓	✓	-
			DME [Digital Motor Electronics]	✓	✓	✓	✓	✓	-
			EGS [Transmission control]	✓	✓	✓	✓	✓	-
			EKPS [Fuel-pump control]	✓	✓	✓	✓	✓	-
			AL [Active steering]	✓	✓	✓	✓	✓	-
			DSC [Dynamic Stability Control]	✓	✓	✓	✓	✓	✓
			EPS [Electronic Power Steering]	✓	✓	✓	✓	✓	-
			RDC [Tyre pressure control]	✓	✓	✓	✓	✓	-
			AMP [Amplifier]	✓	✓	✓	✓	✓	-
			AHM [Trailer module]	✓	✓	✓	✓	✓	-
			CA [Comfort Access system]	✓	✓	✓	✓	✓	-
			CCC-A [Applications]	✓	✓	✓	✓	✓	-
			CCC-ANT [Aerial tuner]	✓	✓	✓	✓	✓	-
			CCC-ASK [Audio system controller]	✓	✓	✓	✓	✓	-
			CCC-BO [User interface]	✓	✓	✓	✓	✓	-
			CCC-GW [Gateway]	✓	✓	✓	✓	✓	-
			CDC [CD Changer]	✓	✓	✓	✓	✓	-
			CHAMP-BO [User interface]	✓	✓	✓	✓	✓	-
			CHAMP-GW [Gateway]	✓	✓	✓	✓	✓	-
			CID [Central Information Display]	✓	✓	✓	✓	✓	-
			CON [Controller]	✓	✓	✓	✓	✓	-
			CVM [Convertible-top module]	✓	✓	✓	✓	✓	-
			DWA [Antitheft alarm system]	✓	✓	✓	✓	✓	-
			FRM [Footwell Module]	✓	✓	✓	✓	✓	-
			FRM2 [Footwell Module 2]	✓	✓	✓	✓	✓	-
			FZD [Function Centre, Roof]	✓	✓	✓	✓	✓	-
			IHKA [Integrated automatic heating/air conditioning]	✓	✓	✓	✓	✓	-
			IHKR [Integrated heating/air-conditioning regulation]	✓	✓	✓	✓	✓	-



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
1 Series	1'_E81/E82 /E87/E88	Body	IHR [Integrated heater control]	✓	✓	✓	✓	✓	-
			INSTR [Instrument cluster]	✓	✓	✓	✓	✓	-
			JBE [Junction-box electronics]	✓	✓	✓	✓	✓	-
			JBE2 [Junction Box electronics 2]	✓	✓	✓	✓	✓	-
			JNAV [Navigation system, Japan]	✓	✓	✓	✓	✓	-
			M-ASK-BO [User interface]	✓	✓	✓	✓	✓	-
			M-ASK-GW [Gateway]	✓	✓	✓	✓	✓	-
			M-ASK-NAV [Navigation system]	✓	✓	✓	✓	✓	-
			MRS [Multiple Restrainment system]	✓	✓	✓	✓	✓	-
			PDC [Park Distance Control]	✓	✓	✓	✓	✓	-
			RAD [Radio]	✓	✓	✓	✓	✓	-
			RAD2-BO [User interface]	✓	✓	✓	✓	✓	-
			RAD2-GW [Gateway]	✓	✓	✓	✓	✓	-
			RLSS [Rain/light solar sensor]	✓	✓	✓	✓	✓	-
			SDARS [Satellite tuner]	✓	✓	✓	✓	✓	-
			SINE [Siren and tilt sensor]	✓	✓	✓	✓	✓	-
			SMBF [Seat module, passenger]	✓	✓	✓	✓	✓	-
			SMFA [Seat module, driver]	✓	✓	✓	✓	✓	-
			TCU [Telematic Control unit]	✓	✓	✓	✓	✓	-
			ULF [Universal charging and hands-free facility]	✓	✓	✓	✓	✓	-
			ULF-SBX [Interface box]	✓	✓	✓	✓	✓	-
			ULF-SBX-H [Interface box High]	✓	✓	✓	✓	✓	-
					Auto Scan				
		Auto Scan Fast							
						Engine oil			
						Microfilter			
						Front brake			
						Rear brake			
						Vehicle check			



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions								
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions			
		Service function	Maintenance	CBS reset				Spark plugs				
								Break Fluid				
									Vehicle inspection			
									Exhaust emission inspection			
									Diesel particle filter			
					Steering-angle sensor							
				Reset service interval indicator	CBS reset							
											Engine oil	
											Front brake	
											Rear brake	
									Vehicle check			
									Spark plugs			
									Break Fluid			
									Coolant (E65)			
							Vehicle inspection					
							Exhaust emission inspection					
3' /Z1_E30 (~ 1993)		Driver and Chassis	DME [Engine]	√	√	√	√	√	-			
			EGS [Transmission]	√	√	√	√	√	-			
			EWS [Electronic immobilize system]	√	√	√	√	√	-			
			GR [Cruise Control]	√	√	√	√	√	-			
			EML [Electronic throttle]	√	√	√	√	√	-			
			ABS [Antilock brake]	√	√	√	√	√	√			
			EHC/EDC [Signal-axle air suspension]	√	√	√	√	√	-			
		AHK [Active Rear-Axle Kinematics]	√	√	√	√	√	-				
		CVM [Convertible-top module]	√	√	√	√	√	-				
		DWA [Burglar-alarm system]	√	√	√	√	√	-				
		EKM [Electronic Body Module]	√	√	√	√	√	-				
		GSA [Closed-Loop-Controlled Differential-Lock AWD]	√	√	√	√	√	-				
		IHKA/IHKR [A/C/heater]	√	√	√	√	√	-				
		IKE/IKI/KOMBI [Instrument cluster]	√	√	√	√	√	-				



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
		Body	LSZ/LCM [Light switching center]	√	√	√	√	√	-
			MID [Multi Information Display]	√	√	√	√	√	-
			PDC [Park Distance Control]	√	√	√	√	√	-
			RAD [Radio]	√	√	√	√	√	-
			SHD [Sliding/tilting sunroof]	√	√	√	√	√	-
			SPM/SM	√	√	√	√	√	-
			SRS [Air bag]	√	√	√	√	√	-
			URS [Rollover sensor]	√	√	√	√	√	-
			VNC [Variable Camshaft Control]	√	√	√	√	√	-
			ZKE [Central body electronic]	√	√	√	√	√	-
	Auto Scan								
	Auto Scan Fast								
	3' /Z3_E36 (1993 ~ 2000)	Driver and Chassis	DME [Engine]	√	√	√	√	√	-
			EGS [Transmission]	√	√	√	√	√	-
			EWS [Electronic immobilize system]	√	√	√	√	√	-
			GR [Cruise control]	√	√	√	√	√	-
			EML [Electronic throttle]	√	√	√	√	√	-
			ABS [Antilock brake]	√	√	√	√	√	√
			EHC/EDC [Signal-axle air suspension]	√	√	√	√	√	-
			AHK [Active Rear-Axle Kinematics]	√	√	√	√	√	-
CVM [Convertible-top module]			√	√	√	√	√	-	
DWA [Burglar-alarm system]			√	√	√	√	√	-	
Body	EKM [Electronic Body Module]	√	√	√	√	√	-		
	GSA [Closed-Loop-Controlled Differential-Lock AWD]	√	√	√	√	√	-		
	IHKA/IHKR [AC/heater]	√	√	√	√	√	-		
	IKE/IKI/KOMBI [Instrument cluster]	√	√	√	√	√	-		
	LSZ/LCM [Light switching center]	√	√	√	√	√	-		
	MID [Multi Information Display]	√	√	√	√	√	-		
	PDC [Park Distance Control]	√	√	√	√	√	-		



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions							
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions		
			RAD [Radio]	√	√	√	√	√	-		
			SHD [Sliding/tilting sunroof]	√	√	√	√	√	-		
			SPM/SM	√	√	√	√	√	-		
			SRS [Air bag]	√	√	√	√	√	-		
			URS [Rollover sensor]	√	√	√	√	√	-		
			VNC [Variable Camshaft Control]	√	√	√	√	√	-		
			ZKE [Central body electronic]	√	√	√	√	√	-		
		Auto Scan									
		Auto Scan Fast									
			Driver and Chassis		DME [Engine]	√	√	√	√	√	-
	DDE [Diesel Electronics]				√	√	√	√	√	-	
	EGS [Transmission]				√	√	√	√	√	-	
	EWS [Electronic immobilize system]				√	√	√	√	√	-	
	GR [Cruise control]				√	√	√	√	√	-	
	ABS [Antilock brake]				√	√	√	√	√	√	
	LEW [Steering-angle sensor]				√	√	√	√	√	-	
	RDC [Tyre pressure control]		√	√	√	√	√	-			
	Body				AIC [Automatic Interval Control]	√	√	√	√	√	-
					BIT [Basic Interface Telephone]	√	√	√	√	√	-
					BM [On-board monitor]	√	√	√	√	√	-
					CVM [Convertible-top module]	√	√	√	√	√	-
					IHKA/IHKR [AC/heater]	√	√	√	√	√	-
					IKE/IKI/KOMBI [Instrument cluster]	√	√	√	√	√	-
					LSZ/LCM [Light switch center]	√	√	√	√	√	-
					MFL [Multi-function steering wheel]	√	√	√	√	√	-
					PDC [Park Distance Control]	√	√	√	√	√	-
		RAD [Radio]			√	√	√	√	√	-	
RLSS [Rain/light solar sensor]	√	√	√	√	√	-					
SHD [Sliding/tilting sunroof]	√	√	√	√	√	-					



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
			SMB [Entrance aid, passenger]	✓	✓	✓	✓	✓	-
			SMF [Seat memory, driver]	✓	✓	✓	✓	✓	-
			SPMBT [Mirror memory, passenger]	✓	✓	✓	✓	✓	-
			SPMFT [Mirror memory, driver]	✓	✓	✓	✓	✓	-
			SRS [Air bag]	✓	✓	✓	✓	✓	-
			SZM [Switching center, center console]	✓	✓	✓	✓	✓	-
			URS [Rollover sensor]	✓	✓	✓	✓	✓	-
			ZKE [Central body electronic]	✓	✓	✓	✓	✓	-
			TCU [Telematic Control unit]	✓	✓	✓	✓	✓	-
		Auto Scan							
		Auto Scan Fast							
		Service function	Reset service interval indicator	Programming, Coding	IKE	SRS	LCM	ZKE	
					Drive	Motor Electronics			
					Chassis	ABS/ASC/DSC			
					CODING (Recoding)	LEW[Steering-angle sensor]			
				LSZ[Light switching centre]					
				ZKE[Central Body Electronic]					
				IHKA[Heater and A/C control]					
				SHD[Sunroof module]					
				IKE[Instrument cluster]					
				SM[Seat module]					
				CAR KEY MEMORY	RAD[Radio]				
					LSZ/LCM[Light switching center]				
					ZKE[Central body electronic]				
					DME				
			EGS						



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions								
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions			
	3'_E46 (1998 ~)	Programming, Coding, Service	E46 1 = 318i	Programming, Coding				EWS				
								ABS				
								A/C				
								SRS				
								IKE				
								LCM				
								ZKE				
								Service functions			ABS/ASC/DSC	
			E46 2 = 330i	Programming, Coding						DME		
										EGS		
										EWS		
										LEW		
										A/C		
										SRS		
										IKE		
										LCM		
							ZKE					
							RAD					
E46 3 = 323i	Programming, Coding						DME					
							EGS					
							LEW					
								SRS				
								DME				
								EGS				
								EWS				
								ABS				
								A/C				
								SRS				



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuatio n	Special Functions
			E46 4 = 325i	Programming, Coding					IKE
			LCM						
ZKE									
AIC									
RAD									
SHD									
SMF									
EKP									
			Service functions					ABS/ASC/DSC	
			E46_323Ci_1999	Programming, Coding					IKE
									SRS
									LCM
									ZKE
				Drive	Motor Electronics				
				Chassis	ABS/ASC/DSC				
				CODING (Recoding)	LEW[Steering-angle sensor]				
					LSZ[Light switching centre]				
			ZKE[Central Body Electronic]						
			IHKA[Heater and A/C control]						
			SHD[Sunroof module]						
			IKE[Instrument cluster]						
			SM[Seat module]						
			CAR KEY MEMORY	RAD[Radio]					
LSZ/LCM[Light switching center]									
ZKE[Central body electronic]									
			CAS [Car Access System]	✓	✓	✓	✓	✓	-
			DME [Digital Motor Electronics]	✓	✓	✓	✓	✓	-
			DDE [Diesel Electronics]	✓	✓	✓	✓	✓	-
			EGS [Transmission control]	✓	✓	✓	✓	✓	-

FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
		Driver and Chassis	GWS [Gear selector switch]	√	√	√	√	√	-
			EKPS [Fuel-pump control]	√	√	√	√	√	-
			VTC [Valvetronic]	√	√	√	√	√	-
			VTC2 [Valvetronic 2]	√	√	√	√	√	-
			VTG [Transfer case]	√	√	√	√	√	-
			AL [Active steering]	√	√	√	√	√	-
			ARS [Dynamic Drive]	√	√	√	√	√	√
			DSC [Dynamic Stability Control]	√	√	√	√	√	-
			EHC [Electronic Ride-Height Control]	√	√	√	√	√	-
			EMF [Parking brake]	√	√	√	√	√	-
			EPS [Electronic Power Steering]	√	√	√	√	√	-
			LDM [Longitudinal Dynamics Management]	√	√	√	√	√	-
			RDC [Tyre pressure control]	√	√	√	√	√	-
			VDM [Vertical Dynamics Management]	√	√	√	√	√	-
			ACSM/SRS [Crash Safety Module]	√	√	√	√	√	-
			AHM [Trailer module]	√	√	√	√	√	-
			AMPH [Hi-Fi amplifier]	√	√	√	√	√	-
			AMPT [Top Hi-Fi amplifier]	√	√	√	√	√	-
			CA [Comfort Access system]	√	√	√	√	√	-
			CCC-A [Applications]	√	√	√	√	√	-
			CCC-ANT [Aerial tuner]	√	√	√	√	√	-
			CCC-ASK [Audio system controller]	√	√	√	√	√	-
			CCC-BO [User interface]	√	√	√	√	√	-
			CCC-GW [Gateway]	√	√	√	√	√	-
			CDC [CD Changer]	√	√	√	√	√	-
			CHAMP-BO [User interface]	√	√	√	√	√	-
			CHAMP-GW [Gateway]	√	√	√	√	√	-
			CID [Central Information Display]	√	√	√	√	√	-
		CNAV [Navigation system, China]	√	√	√	√	√	-	



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
3 Series		Chassis	CON [Controller]	✓	✓	✓	✓	✓	-
			DVD-C [DVD Changer]	✓	✓	✓	✓	✓	-
			DWA [Antitheft alarm system]	✓	✓	✓	✓	✓	-
			FD [Rear-cabin display]	✓	✓	✓	✓	✓	-
			FKA [Rear heater/air conditioning]	✓	✓	✓	✓	✓	-
			FLA [High Beam Assist]	✓	✓	✓	✓	✓	-
			FRM2 [Footwell module 2]	✓	✓	✓	✓	✓	-
			FZD [Function Center, Roof]	✓	✓	✓	✓	✓	-
			HKL [Rear-lid lift]	✓	✓	✓	✓	✓	-
			HUD [Head-Up Display]	✓	✓	✓	✓	✓	-
			HKA [Integrated automatic heating/air conditioning]	✓	✓	✓	✓	✓	-
			INSTR [Instrument cluster]	✓	✓	✓	✓	✓	-
			JBE2 [Junction Box electronics 2]	✓	✓	✓	✓	✓	-
			JNAV [Navigation system, Japan]	✓	✓	✓	✓	✓	-
			KHM [Headphones module]	✓	✓	✓	✓	✓	-
			KNAV [Navigation system, Korea]	✓	✓	✓	✓	✓	-
			M-ASK-BO [User interface]	✓	✓	✓	✓	✓	-
			M-ASK-GW [Gateway]	✓	✓	✓	✓	✓	-
			PDC [Park Distance Control]	✓	✓	✓	✓	✓	-
			RFK [Reversing camera]	✓	✓	✓	✓	✓	-
			RLSS [Rain/Light solar sensor]	✓	✓	✓	✓	✓	-
			SDARS [Satellite tuner]	✓	✓	✓	✓	✓	-
			SINE [Siren and tilt sensor]	✓	✓	✓	✓	✓	-
			SMBF [Seat module, passenger]	✓	✓	✓	✓	✓	-
			SMFA [Seat module, driver]	✓	✓	✓	✓	✓	-
			TCU [Transmission Control unit]	✓	✓	✓	✓	✓	-
ULF-SBX [Interface box]	✓	✓	✓	✓	✓	-			
ULF-SBX-H [Interface box High]	✓	✓	✓	✓	✓	-			
VM [Video Module]	✓	✓	✓	✓	✓	-			



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	
	3_E90/E91/E92/E93 (2004 ~)		VSW [Video switch]	✓	✓	✓	✓	✓	-	
		Auto Scan								
		Auto Scan Fast								
		Service function	Maintenance		CBS reset	Engine oil				
						Microfilter				
						Front brake				
						Rear brake				
						Vehicle check				
						Spark plugs				
						Break Fluid				
						Vehicle inspection				
						Exhaust emission inspection				
				Steering-angle sensor						
		Reset service interval indicator		CBS reset		Engine oil				
						Front brake				
	Rear brake									
	Vehicle check									
	Spark plugs									
	Break Fluid									
	Coolant (E65)									
	Vehicle inspection									
					Exhaust emission inspection					
		E90/E91/E92/E93 1 = 330i			Service functions		1 Steering-angle sensor			
		E90_325i_2005 1				Drive		DME		
										EGS
					Coding/Program		CODING (Recoding)			
									Maintenance	
							Service functions			



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions								
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions			
		Programming,Coding,Service	E90_325i_2005 2	Programming, Coding	Passenger side seat airbag							
					Central door lock							
					Tire pressure							
					Transmission							
			E92_M3_2008	Coding/Program	Maintenance	CBS reset	Engine oil					
							Microfilter					
							Front brake					
							Rear brake					
							Vehicle check					
							Spark plugs					
							Break Fluid					
							Vehicle inspection					
			E90_2003	Programming, Coding	1 oc3_1(seat airbag)							
					2 seat airbag battery							
					3 Automatic close window							
E90_Unit_Coding(KWP)	SRS - Supplemental Restraint System											
	CCC-ASK [Audio system controller]											
	CAS [Car Access System]											
	KBM [Body Basic Module]											
	INSTR [Instrument cluster]											
	M-ASK-GW [Gateway]											
	DSC [Dynamic Stability control]											
E90_Unit_Coding(CAN)	ZGM/SGM/JBBF [Safety and Gateway Module]											
	SIM/SGM/ACSM [Safety And Information]											
	CAS [Car Access System]											
	FZD [Functional center roof]											
	INSTR [Instrument cluster]											



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
			E39_01FC_Coding (CAR)	MMI/CCC [MMI Audio System Controller]					
				FAS [Seat Module Front]					
				BFS [Seat Module Back]					
				KBM/FRM [Base Body Module]					
				KLIMA [Climate Module]					
		Driver and Chassis	CAS [Car Access System]	✓	✓	✓	✓	✓	-
			DME/DDE [Digital motor/Diesel electronics]	✓	✓	✓	✓	✓	-
			EKPS [Electronic Fuel pump]	✓	✓	✓	✓	✓	-
			EGS/SMG [Transmission management]	✓	✓	✓	✓	✓	-
			VTG [Transfer case]	✓	✓	✓	✓	✓	-
			GWS [Gear selector switch]	✓	✓	✓	✓	✓	-
			AL [Active steering]	✓	✓	✓	✓	✓	-
			ICM [Integrated chassis management]	✓	✓	✓	✓	✓	-
			RDC [Tyre pressure control]	✓	✓	✓	✓	✓	-
			DSC [Dynamic Stability Control]	✓	✓	✓	✓	✓	-
			EMF [Parking brake]	✓	✓	✓	✓	✓	-
			HSR [Rear-axle slip-angle control]	✓	✓	✓	✓	✓	-
			EPS [Electronic Power Steering]	✓	✓	✓	✓	✓	-
			EHC [Electronic Ride-Height Control]	✓	✓	✓	✓	✓	-
			VDM [Vertical Dynamics Management]	✓	✓	✓	✓	✓	-
			EDCSVL [Damper satellite, front left]	✓	✓	✓	✓	✓	-
			EDCSVR [Damper satellite, front right]	✓	✓	✓	✓	✓	-
			EDCSHL [Damper satellite, rear left]	✓	✓	✓	✓	✓	-
			EDCSHR [Damper satellite, rear right]	✓	✓	✓	✓	✓	-
			JBE [Junction-box electronics]	✓	✓	✓	✓	✓	-
		ACSM/SRS [Crash Safety Module]	✓	✓	✓	✓	✓	-	
		SZL [Switch center steering column]	✓	✓	✓	✓	✓	-	
		TR SVC [All round view camera]	✓	✓	✓	✓	✓	-	
		SWW [Lane change warning]	✓	✓	✓	✓	✓	-	



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuatio n	Special Functions
	3'_F30	BODY	ZGM [Central Gateway Module]	√	√	√	√	√	-
			RSE [Rear Seat Entertainment]	√	√	√	√	√	-
			TCU/ULF [Telephone]	√	√	√	√	√	-
			HUD [Head-Up Display]	√	√	√	√	√	-
			VSW [Video switch]	√	√	√	√	√	-
			VM [Video Module]	√	√	√	√	√	-
			EMALI [Left electric motor reel]	√	√	√	√	√	-
			EMARE [Right electric motor reel]	√	√	√	√	√	-
			FZD [Function centre, roof]	√	√	√	√	√	-
			NVE [Night Vision Electronics]	√	√	√	√	√	-
			KAFAS [Camera based driver assist systems]	√	√	√	√	√	-
			FLA [High Beam Assist]	√	√	√	√	√	-
			INSTR [Instrument cluster]	√	√	√	√	√	-
			CIC/CHAMP [Car headunit platform]	√	√	√	√	√	-
			PDC [Park Distance Control]	√	√	√	√	√	-
			CON [Controller]	√	√	√	√	√	-
			FCON [Rear Compartment controller]	√	√	√	√	√	-
			SMFAH [Seat module, driver's side rear]	√	√	√	√	√	-
			SMBFH [Seat module, passenger's side rear]	√	√	√	√	√	-
			HKL [Rear-lid lift]	√	√	√	√	√	-
			SMFA [Seat module, driver]	√	√	√	√	√	-
			SMBF [Seat module, passenger]	√	√	√	√	√	-
			AHM [Trailer module]	√	√	√	√	√	-
			FRM [Footwell Module]	√	√	√	√	√	-
			CID [Central Information Display]	√	√	√	√	√	-
			FD [Rear compartment display]	√	√	√	√	√	-
			FD2 [Rear compartment display 2]	√	√	√	√	√	-
			RFK [Reversing camera]	√	√	√	√	√	-
	HKA [Integrated automatic heating/air conditioning]	√	√	√	√	√	-		



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions							
				Sys. Info.	Read code	Clear code	Data Stream	Actuatio n	Special Functions		
			FKA [Rear-cabin automatic A/C]	√	√	√	√	√	-		
			HKA [Rear-cabin automatic A/C]	√	√	√	√	√	-		
			AMP [Amplifier]	√	√	√	√	√	-		
			DVDC [DVD changer]	√	√	√	√	√	-		
		Auto Scan									
		Auto Scan Fast									
		Service function	Maintenance	CBS reset	Engine oil						
					Front brake						
					Rear brake						
					Vehicle check						
					Break Fluid						
					Microfilter						
					Spark plugs						
					Vehicle inspection						
		Exhaust emission inspection									
Driver and Chassis			CAS [Car Access System]	√	√	√	√	√	-		
			DME/DDE [Digital motor/Diesel electronics]	√	√	√	√	√	-		
			EKPS [Electronic Fuel pump]	√	√	√	√	√	-		
			EGS/SMG [Transmission management]	√	√	√	√	√	-		
			VTG [Transfer case]	√	√	√	√	√	-		
			GWS [Gear selector switch]	√	√	√	√	√	-		
			AL [Active steering]	√	√	√	√	√	-		
			ICM [Integrated chassis management]	√	√	√	√	√	-		
			RDC [Tyre pressure control]	√	√	√	√	√	-		
			DSC [Dynamic Stability Control]	√	√	√	√	√	-		
			EMF [Parking brake]	√	√	√	√	√	-		
			HSR [Rear-axle slip-angle control]	√	√	√	√	√	-		
			EPS [Electronic Power Steering]	√	√	√	√	√	-		
EHC [Electronic Ride-Height Control]	√	√	√	√	√	-					



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
			VDM [Vertical Dynamics Management]	√	√	√	√	√	-
			EDCSVL [Damper satellite, front left]	√	√	√	√	√	-
			EDCSVR [Damper satellite, front right]	√	√	√	√	√	-
			EDCSHL [Damper satellite, rear left]	√	√	√	√	√	-
			EDCSHR [Damper satellite, rear right]	√	√	√	√	√	-
			JBE [Junction-box electronics]	√	√	√	√	√	-
			ACSM/SRS [Crash Safety Module]	√	√	√	√	√	-
			SZL [Switch center steering column]	√	√	√	√	√	-
			TRSVC [All round view camera]	√	√	√	√	√	-
			SWW [Lane change warning]	√	√	√	√	√	-
			ZGM [Central Gateway Module]	√	√	√	√	√	-
			RSE [Rear Seat Entertainment]	√	√	√	√	√	-
			TCU/ULF [Telephone]	√	√	√	√	√	-
			HUD [Head-Up Display]	√	√	√	√	√	-
			VSW [Video switch]	√	√	√	√	√	-
			VM [Video Module]	√	√	√	√	√	-
			EMALI [Left electric motor reel]	√	√	√	√	√	-
			EMARE [Right electric motor reel]	√	√	√	√	√	-
			FZD [Function centre, roof]	√	√	√	√	√	-
			NVE [Night Vision Electronics]	√	√	√	√	√	-
			KAFAS [Camera based driver assist systems]	√	√	√	√	√	-
			FLA [High Beam Assist]	√	√	√	√	√	-
			INSTR [Instrument cluster]	√	√	√	√	√	-
			CIC/CHAMP [Car headunit platform]	√	√	√	√	√	-
			PDC [Park Distance Control]	√	√	√	√	√	-
			CON [Controller]	√	√	√	√	√	-
			FCON [Rear Compartment controller]	√	√	√	√	√	-
			SMFAH [Seat module, driver's side rear]	√	√	√	√	√	-
			SMBFH [Seat module, passenger's side rear]	√	√	√	√	√	-

3'_F35

BODY



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions									
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions				
			HKL [Rear-lid lift]	√	√	√	√	√	-				
			SMFA [Seat module, driver]	√	√	√	√	√	-				
			SMBF [Seat module, passenger]	√	√	√	√	√	-				
			AHM [Trailer module]	√	√	√	√	√	-				
			FRM [Footwell Module]	√	√	√	√	√	-				
			CID [Central Information Display]	√	√	√	√	√	-				
			FD [Rear compartment display]	√	√	√	√	√	-				
			FD2 [Rear compartment display 2]	√	√	√	√	√	-				
			RFK [Reversing camera]	√	√	√	√	√	-				
			HKA [Integrated automatic heating/air conditioning]	√	√	√	√	√	-				
			FKA [Rear-cabin automatic A/C]	√	√	√	√	√	-				
			HKA [Rear-cabin automatic A/C]	√	√	√	√	√	-				
			AMP [Amplifier]	√	√	√	√	√	-				
			DVDC [DVD changer]	√	√	√	√	√	-				
		Auto Scan											
		Auto Scan Fast											
		Service function	Maintenance	CBS reset	Engine oil	Front brake	Rear brake	Vehicle check	Break Fluid	Microfilter	Spark plugs	Vehicle inspection	Exhaust emission inspection
				Driver and Chassis	DME [Engine]	√	√	√	√	√	-		
					EGS [Transmission]	√	√	√	√	√	-		
					EWS [Electronic immobilize system]	√	√	√	√	√	-		
GR [Cruise control]	√				√	√	√	√	-				



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions							
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions		
	5'_E28 (~1990)		EML [Electronic throttle]	✓	✓	✓	✓	✓	-		
			ABS [Antilock brake]	✓	✓	✓	✓	✓	✓		
			EHC/EDC [Signal-axle air suspension]	✓	✓	✓	✓	✓	-		
		BODY	AHK [Active Rear-Axle Kinematics]	✓	✓	✓	✓	✓	-		
			CVM [Convertible-top module]	✓	✓	✓	✓	✓	-		
			DWA [Burglar-alarm system]	✓	✓	✓	✓	✓	-		
			EKM [Electronic Body Module]	✓	✓	✓	✓	✓	-		
			GSA [Closed-Loop-Controlled Differential-Lock AWD]	✓	✓	✓	✓	✓	-		
			IHKA/IHKR [AC/heater]	✓	✓	✓	✓	✓	-		
			IKE/IKI/KOMBI [Instrument cluster]	✓	✓	✓	✓	✓	-		
			LSZ/LCM [Light switching center]	✓	✓	✓	✓	✓	-		
			MID [Multi Information Display]	✓	✓	✓	✓	✓	-		
			PDC [Park Distance Control]	✓	✓	✓	✓	✓	-		
			RAD [Radio]	✓	✓	✓	✓	✓	-		
			SHD [Sliding/tilting sunroof]	✓	✓	✓	✓	✓	-		
			SPM/SM	✓	✓	✓	✓	✓	-		
			SRS [Air bag]	✓	✓	✓	✓	✓	-		
			URS [Rollover sensor]	✓	✓	✓	✓	✓	-		
			VNC [Variable Camshaft Control]	✓	✓	✓	✓	✓	-		
			ZKE [Central body electronic]	✓	✓	✓	✓	✓	-		
		Auto Scan									
		Auto Scan Fast									
				Driver and Chassis	DME [Engine]	✓	✓	✓	✓	✓	-
					EGS [Transmission]	✓	✓	✓	✓	✓	-
					EWS [Electronic immobilize system]	✓	✓	✓	✓	✓	-
					GR [Cruise control]	✓	✓	✓	✓	✓	-
					EML [Electronic throttle]	✓	✓	✓	✓	✓	-
					ABS [Antilock brake]	✓	✓	✓	✓	✓	✓
EHC/EDC [Signal-axle air suspension]	✓				✓	✓	✓	✓	-		

FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
5'_E34 (1989 ~ 1995)		BODY	AHK [Active Rear-Axle Kinematics]	√	√	√	√	√	-
			CVM [Convertible-top module]	√	√	√	√	√	-
			DWA [Burglar-alarm system]	√	√	√	√	√	-
			EKM [Electronic Body Module]	√	√	√	√	√	-
			GSA [Closed-Loop-Controlled Differential-Lock AWD]	√	√	√	√	√	-
			IHKA/IHKR [AC/heater]	√	√	√	√	√	-
			IKE/IKI/KOMBI [Instrument cluster]	√	√	√	√	√	-
			LSZ/LCM [Light switching center]	√	√	√	√	√	-
			MID [Multi Information Display]	√	√	√	√	√	-
			PDC [Park Distance Control]	√	√	√	√	√	-
			RAD [Radio]	√	√	√	√	√	-
			SHD [Sliding/tilting sunroof]	√	√	√	√	√	-
			SPM/SM	√	√	√	√	√	-
			SRS [Air bag]	√	√	√	√	√	-
			URS [Rollover sensor]	√	√	√	√	√	-
			VNC [Variable Camshaft Control]	√	√	√	√	√	-
		ZKE [Central body electronic]	√	√	√	√	√	-	
		Auto Scan							
		Auto Scan Fast							
				Driver and Chassis	DME [Engine]	√	√	√	√
DDE [Diesel Electronics]	√				√	√	√	√	-
EGS [Transmission]	√				√	√	√	√	-
EWS [Electronic immobilize system]	√				√	√	√	√	-
GR [Cruise control]	√				√	√	√	√	-
ABS [Antilock brake]	√				√	√	√	√	√
EHC/EDC [Signal-axle air suspension]	√				√	√	√	√	-
LEW [Steering-angle sensor]	√				√	√	√	√	-
AIC [Automatic Interval Control]	√			√	√	√	√	-	
BIT [Basic Interface Telephone]	√			√	√	√	√	-	



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
5'_E39 (1995 ~)		BODY	BM [On-board monitor]	√	√	√	√	√	-
			IHKA/IHKR [AC/heater]	√	√	√	√	√	-
			IKE/IKI/KOMBI [Instrument cluster]	√	√	√	√	√	-
			LSZ/LCM [Light switching center]	√	√	√	√	√	-
			MFL [Multi-function steering wheel]	√	√	√	√	√	-
			MID [Multi Information Display]	√	√	√	√	√	-
			NAV [Navigation system]	√	√	√	√	√	-
			PDC [Park Distance Control]	√	√	√	√	√	-
			RAD [Radio]	√	√	√	√	√	-
			SES [Language-input system]	√	√	√	√	√	-
			SHD [Sliding/tilting sunroof]	√	√	√	√	√	-
			SPM/SM	√	√	√	√	√	-
			SRS [Air bag]	√	√	√	√	√	-
			SZM [Switching center, center console]	√	√	√	√	√	-
			VID [Video Module]	√	√	√	√	√	-
		ZKE [Central body electronic]	√	√	√	√	√	-	
		Auto Scan							
		Auto Scan Fast							
		Service function	Reset service interval indicator						
				Programming, Coding, Service	E39 1 = 528i		Programming, Coding		DME
							EWS		
							A/C		
							SRS		
							IKE		
							LCM		
							ZKE		
							PDC		
							AIC		
							RAD		



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
							TEL		
							MID		
			E39_528i_1999	Recodong/Reprogramming			SRS		
							LCM		
							ZKE		
				Coding/Program			CODING (Recoding)		
			E39_525i_2002	Reset service interval indicator					
		Driver and Chassis	CAS [Car Access System]	√	√	√	√	√	-
			DDE [Diesel Electronics]	√	√	√	√	√	-
			DME [Digital Motor Electronics]	√	√	√	√	√	-
			EGS [Transmission control]	√	√	√	√	√	-
			EKPS [Fuel-pump control]	√	√	√	√	√	-
			GWS [Gear selector switch]	√	√	√	√	√	-
			SMG [Sequential Manual Gearbox]	√	√	√	√	√	-
			VTC [Valvetronic, bank 1]	√	√	√	√	√	-
			VTC2 [Valvetronic, bank 2]	√	√	√	√	√	-
			VTG [Transfer Case]	√	√	√	√	√	-
			AL [Active steering]	√	√	√	√	√	-
			ARS [Dynamic Drive]	√	√	√	√	√	√
			DSC [Dynamic Stability Control]	√	√	√	√	√	-
			DSC [Dynamic Stability Control PLUS]	√	√	√	√	√	-
			DSC [Dynamic Stability Control Premium]	√	√	√	√	√	-
			EDC [Damper Control]	√	√	√	√	√	-
			EHC [Electronic Ride-Height Control]	√	√	√	√	√	-
			LDM [Longitudinal Dynamics Management]	√	√	√	√	√	-
			RDC [Tyre pressure control]	√	√	√	√	√	-
			ACSM/SRS [Crash Safety Module]	√	√	√	√	√	-
		AHL [Adaptive directional headlights]	√	√	√	√	√	-	
		AHM [Trailer module]	√	√	√	√	√	-	



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
			AMP [Amplifier]	√	√	√	√	√	-
			CA [Comfort Access system]	√	√	√	√	√	-
			CCC-A [Applications]	√	√	√	√	√	-
			CCC-ANT [Aerial tuner]	√	√	√	√	√	-
			CCC-ASK [Audio system controller]	√	√	√	√	√	-
			CCC-BO [User interface]	√	√	√	√	√	-
			CCC-GW [Gateway]	√	√	√	√	√	-
			CDC [CD Changer]	√	√	√	√	√	-
			CHAMP-BO [User interface]	√	√	√	√	√	-
			CHAMP-GW [Gateway]	√	√	√	√	√	-
			CIC [Car Information Computer]	√	√	√	√	√	-
			CIC-GW [Gateway]	√	√	√	√	√	-
			CID [Central Information Display]	√	√	√	√	√	-
			CNAV [Navigation system, China]	√	√	√	√	√	-
			CON [Controller]	√	√	√	√	√	-
			DVD-C [DVD Changer]	√	√	√	√	√	-
			DWA [Antitheft alarm system]	√	√	√	√	√	-
			ZM [Rear compartment, control centre, center console]	√	√	√	√	√	-
			FD [Rear-cabin display]	√	√	√	√	√	-
			FD2 [Rear-cabin display 2]	√	√	√	√	√	-
			FLA [High Beam Assist]	√	√	√	√	√	-
			HKL [Rear-lid lift]	√	√	√	√	√	-
			HUD [Head-Up Display]	√	√	√	√	√	-
			HKA [Integrated automatic heating/air conditioning]	√	√	√	√	√	-
			IHKA2 [Integrated automatic heating/air condition]	√	√	√	√	√	-
			INSTR [Instrument cluster]	√	√	√	√	√	-
			JNAV [Navigation system, Japan]	√	√	√	√	√	-
			KBM [Body Basic Module]	√	√	√	√	√	-
			KGM [Body Gateway Module]	√	√	√	√	√	-

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
5'_E60/E61 (2003 ~)		BODY	KHI [Headset interface]	√	√	√	√	√	-
			KNAV [Navigation system, Korea]	√	√	√	√	√	-
			LM2 AHL2 [Light module 2 with adaptive headlight 2]	√	√	√	√	√	-
			LM2 [Light module 2]	√	√	√	√	√	-
			LM2 [Light Module 2 with adaptive headlight]	√	√	√	√	√	-
			M-ASK-B0 [User interface]	√	√	√	√	√	-
			M-ASK-GW [Gateway]	√	√	√	√	√	-
			M-ASK-NAV [Navigation system]	√	√	√	√	√	-
			MPM [Micro-power module]	√	√	√	√	√	-
			NVE [Night Vision Electronics]	√	√	√	√	√	-
			PDC [Park Distance Control]	√	√	√	√	√	-
			RLS [Rain/Light Sensor]	√	√	√	√	√	-
			RLSS [Rain/Light solar sensor]	√	√	√	√	√	-
			SBSL [Satellite, B-pillar, left]	√	√	√	√	√	-
			SBSR [Satellite, B-pillar, right]	√	√	√	√	√	-
			SDARS [Satellite tuner]	√	√	√	√	√	-
			SFZ [Satellite vehicle center]	√	√	√	√	√	-
			SGM-SIM [Safety and Gateway Module(SIM)]	√	√	√	√	√	-
			SGM-ZGM [Safety and Gateway Module(ZGM)]	√	√	√	√	√	-
			SHD [Sliding/tilting sunroof]	√	√	√	√	√	-
			SHZH [Independent/auxiliary heater]	√	√	√	√	√	-
			SINE [Siren and tilt sensor]	√	√	√	√	√	-
			SMBF [Seat module, passenger]	√	√	√	√	√	-
			SMFA [Seat module, driver]	√	√	√	√	√	-
			SVS [Language processing system]	√	√	√	√	√	-
			SZL [Switch center, steering column]	√	√	√	√	√	-
			SZL2 [Steering column switch center 2]	√	√	√	√	√	-
			SZM [Switching center, center console]	√	√	√	√	√	-
TCU [Telematic Control unit]	√	√	√	√	√	-			



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions							
				Sys. Info.	Read code	Clear code	Data Stream	Actuatio n	Special Functions		
5 SERIES			TMBFH [Door Module Passenger Side Rear]	✓	✓	✓	✓	✓	-		
			TMFAH [Door Module Driver's Side Rear]	✓	✓	✓	✓	✓	-		
			TMBF [Door module, front passenger]	✓	✓	✓	✓	✓	-		
			TMFA [Door module, driver]	✓	✓	✓	✓	✓	-		
			ULF [Universal charging and hands-free facility]	✓	✓	✓	✓	✓	-		
			ULF-SBX [Interface box]	✓	✓	✓	✓	✓	-		
			ULF-SBX-H [Interface box High]	✓	✓	✓	✓	✓	-		
			VM [Video Module]	✓	✓	✓	✓	✓	-		
		Auto Scan									
		Auto Scan Fast									
		Service function	Maintenance	CBS reset	Engine oil						
					Microfilter						
					Front brake						
					Rear brake						
					Vehicle check						
					Spark plugs						
					Break Fluid						
					Vehicle inspection						
Exhaust emission inspection											
Diesel particle filter											
Steering-angle sensor											
	E60_E61	Programming, Coding	DSC								
			SRS								
		Service functions	1 Steering-angle sensor								
			3 Tyre defect indicator								
	E60_525i_2004	Drive	CAS								
			DME								
			EGS								
		Coding/Program	Maintenance								



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuatio n	Special Functions
		Programming,Coding ,Service		Coding/Program		Service functions			
			E60_530i_2004	Service functions		Maintenance			
						Driver			
						Chassis			
				Reset service interval indicator					
				CAS [Car Access System]					
				KBM [Body Basic Module]					
				KLIMA [Climate Module]					
				INSTR [Instrument cluster]					
				LM [Light Module]					
			RLS [Rain/Light Sensor]						
			SBSL [Satellite, B-pillar, left]						
			SBSR [Satellite, B-pillar, right]						
			SFZ [Satellite vehicle center]						
			ACSM/SRS [Crash Safety Module]						
			TMFA [Door module, driver]						
			TMBF [Switch center steering column]						
			SZL [Switch center steering column]						
			TCU [Telematic Control unit]						
			CAS [Car Access System]	✓	✓	✓	✓	✓	-
			DME/DDE [Digital motor/Diesel electronics]	✓	✓	✓	✓	✓	-
			EKPS [Electronic Fuel pump]	✓	✓	✓	✓	✓	-
			EGS/SMG [Transmission management]	✓	✓	✓	✓	✓	-
			VTG [Transfer case]	✓	✓	✓	✓	✓	-
			GWS [Gear selector switch]	✓	✓	✓	✓	✓	-
			AL [Active steering]	✓	✓	✓	✓	✓	-
			ICM [Integrated chassis management]	✓	✓	✓	✓	✓	-
			RDC [Tyre pressure control]	✓	✓	✓	✓	✓	-
			DSC [Dynamic Stability Control]	✓	✓	✓	✓	✓	-

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
	5'_GT_F07 (2010 ~)	Driver and Chassis	EMF [Parking brake]	√	√	√	√	√	-
			HSR [Rear-axle slip-angle control]	√	√	√	√	√	-
			EPS [Electronic Power Steering]	√	√	√	√	√	-
			EHC [Electronic Ride-Height Control]	√	√	√	√	√	-
			VDM [Vertical Dynamics Management]	√	√	√	√	√	-
			EDCSVL [Damper satellite, front left]	√	√	√	√	√	-
			EDCSVR [Damper satellite, front right]	√	√	√	√	√	-
			EDCSHL [Damper satellite, rear left]	√	√	√	√	√	-
			EDCSHR [Damper satellite, rear right]	√	√	√	√	√	-
		BODY	JBE [Junction-box electronics]	√	√	√	√	√	-
			ACSM/SRS [Crash Safety Module]	√	√	√	√	√	-
			SZL [Switch center steering column]	√	√	√	√	√	-
			TRSVC [All round view camera]	√	√	√	√	√	-
			SWW [Lane change warning]	√	√	√	√	√	-
			ZGM [Central Gateway Module]	√	√	√	√	√	-
			RSE [Rear Seat Entertainment]	√	√	√	√	√	-
			TCU/ULF [Telephone]	√	√	√	√	√	-
			HUD [Head-Up Display]	√	√	√	√	√	-
			VSW [Video switch]	√	√	√	√	√	-
			VM [Video Module]	√	√	√	√	√	-
			EMALI [Left electric motor reel]	√	√	√	√	√	-
			EMARE [Right electric motor reel]	√	√	√	√	√	-
			FZD [Function centre, roof]	√	√	√	√	√	-
			NVE [Night Vision Electronics]	√	√	√	√	√	-
			KAFAS [Camera based driver assist systems]	√	√	√	√	√	-
			FLA [High Beam Assist]	√	√	√	√	√	-
			INSTR [Instrument cluster]	√	√	√	√	√	-
			CIC/CHAMP [Car headunit platform]	√	√	√	√	√	-
			PDC [Park Distance Control]	√	√	√	√	√	-



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions											
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions						
			CON [Controller]	✓	✓	✓	✓	✓	-						
			FCON [Rear Compartment controller]	✓	✓	✓	✓	✓	-						
			SMFAH [Seat module, driver's side rear]	✓	✓	✓	✓	✓	-						
			SMBFH [Seat module, passenger's side rear]	✓	✓	✓	✓	✓	-						
			HKL [Rear-lid lift]	✓	✓	✓	✓	✓	-						
			SMFA [Seat module, driver]	✓	✓	✓	✓	✓	-						
			SMBF [Seat module, passenger]	✓	✓	✓	✓	✓	-						
			AHM [Trailer module]	✓	✓	✓	✓	✓	-						
			FRM [Footwell Module]	✓	✓	✓	✓	✓	-						
			CID [Central Information Display]	✓	✓	✓	✓	✓	-						
			FD [Rear compartment display]	✓	✓	✓	✓	✓	-						
			FD2 [Rear compartment display 2]	✓	✓	✓	✓	✓	-						
			RFK [Reversing camera]	✓	✓	✓	✓	✓	-						
			HKA [Integrated automatic heating/air conditioning]	✓	✓	✓	✓	✓	-						
			FKA [Rear-cabin automatic A/C]	✓	✓	✓	✓	✓	-						
			HKA [Rear-cabin automatic A/C]	✓	✓	✓	✓	✓	-						
			AMP [Amplifier]	✓	✓	✓	✓	✓	-						
			DVDC [DVD changer]	✓	✓	✓	✓	✓	-						
		Auto Scan													
		Auto Scan Fast													
		Coding/Program	Maintenance			CBS reset	Engine oil	Front brake	Rear brake	Vehicle check	Break Fluid	Microfilter	Spark plugs	Vehicle inspection	Exhaust emission inspection

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
		Driver and Chassis	CAS [Car Access System]	√	√	√	√	√	-
			DME/DDE [Digital motor/Diesel electronics]	√	√	√	√	√	-
			EKPS [Electronic Fuel pump]	√	√	√	√	√	-
			EGS/SMG [Transmission management]	√	√	√	√	√	-
			VTG [Transfer case]	√	√	√	√	√	-
			GWS [Gear selector switch]	√	√	√	√	√	-
			AL [Active steering]	√	√	√	√	√	-
			ICM [Integrated chassis management]	√	√	√	√	√	-
			RDC [Tyre pressure control]	√	√	√	√	√	-
			DSC [Dynamic Stability Control]	√	√	√	√	√	-
			EMF [Parking brake]	√	√	√	√	√	-
			HSR [Rear-axle slip-angle control]	√	√	√	√	√	-
			EPS [Electronic Power Steering]	√	√	√	√	√	-
			EHC [Electronic Ride-Height Control]	√	√	√	√	√	-
			VDM [Vertical Dynamics Management]	√	√	√	√	√	-
			EDCSVL [Damper satellite, front left]	√	√	√	√	√	-
			EDCSVR [Damper satellite, front right]	√	√	√	√	√	-
			EDCSHL [Damper satellite, rear left]	√	√	√	√	√	-
			EDCSHR [Damper satellite, rear right]	√	√	√	√	√	-
			JBE [Junction-box electronics]	√	√	√	√	√	-
		ACSM/SRS [Crash Safety Module]	√	√	√	√	√	-	
		SZL [Switch center steering column]	√	√	√	√	√	-	
		TRSVC [All round view camera]	√	√	√	√	√	-	
		SWW [Lane change warning]	√	√	√	√	√	-	
		ZGM [Central Gateway Module]	√	√	√	√	√	-	
		RSE [Rear Seat Entertainment]	√	√	√	√	√	-	
		TCU/ULF [Telephone]	√	√	√	√	√	-	
		HUD [Head-Up Display]	√	√	√	√	√	-	
		VSW [Video switch]	√	√	√	√	√	-	



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
5'_F10/F11/F18 (2010 ~)		BODY	VM [Video Module]	√	√	√	√	√	-
			EMALI [Left electric motor reel]	√	√	√	√	√	-
			EMARE [Right electric motor reel]	√	√	√	√	√	-
			FZD [Function centre, roof]	√	√	√	√	√	-
			NVE [Night Vision Electronics]	√	√	√	√	√	-
			KAFAS [Camera based driver assist systems]	√	√	√	√	√	-
			FLA [High Beam Assist]	√	√	√	√	√	-
			INSTR [Instrument cluster]	√	√	√	√	√	-
			CIC/CHAMP [Car headunit platform]	√	√	√	√	√	-
			PDC [Park Distance Control]	√	√	√	√	√	-
			CON [Controller]	√	√	√	√	√	-
			FCON [Rear Compartment controller]	√	√	√	√	√	-
			SMFAH [Seat module, driver's side rear]	√	√	√	√	√	-
			SMBFH [Seat module, passenger's side rear]	√	√	√	√	√	-
			HKL [Rear-lid lift]	√	√	√	√	√	-
			SMFA [Seat module, driver]	√	√	√	√	√	-
			SMBF [Seat module, passenger]	√	√	√	√	√	-
			AHM [Trailer module]	√	√	√	√	√	-
			FRM [Footwell Module]	√	√	√	√	√	-
			CID [Central Information Display]	√	√	√	√	√	-
			FD [Rear compartment display]	√	√	√	√	√	-
			FD2 [Rear compartment display 2]	√	√	√	√	√	-
			RFK [Reversing camera]	√	√	√	√	√	-
			HKA [Integrated automatic heating/air conditioning]	√	√	√	√	√	-
			FKA [Rear-cabin automatic A/C]	√	√	√	√	√	-
			HKA [Rear-cabin automatic A/C]	√	√	√	√	√	-
			AMP [Amplifier]	√	√	√	√	√	-
DVDC [DVD changer]	√	√	√	√	√	-			
Auto Scan									



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions											
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions						
		Auto Scan Fast													
		Coding/Program	Maintenance			CBS reset	Engine oil	Front brake	Rear brake	Vehicle check	Break Fluid	Microfilter	Spark plugs	Vehicle inspection	Exhaust emission inspection
		Driver and Chassis	DME [Engine]	√	√	√	√	√	√	-					
			EGS [Transmission]	√	√	√	√	√	√	-					
			EWS [Electronic immobilize system]	√	√	√	√	√	√	-					
			GR [Cruise control]	√	√	√	√	√	√	-					
			EML [Electronic throttle]	√	√	√	√	√	√	-					
			ABS [Antilock brake]	√	√	√	√	√	√	√					
			EHC/EDC [Signal-axle air suspension]	√	√	√	√	√	√	-					
		Body	AHK [Active Rear-Axle Kinematics]	√	√	√	√	√	√	-					
			CVM [Convertible-top module]	√	√	√	√	√	√	-					
			DWA [Burglar-alarm system]	√	√	√	√	√	√	-					
			EKM [Electronic Body Module]	√	√	√	√	√	√	-					
			GSA [Closed-Loop-Controlled Differential-Lock AWD]	√	√	√	√	√	√	-					
			IHKA/IHKR [AC/heater]	√	√	√	√	√	√	-					
			IKE/IKI/KOMBI [Instrument cluster]	√	√	√	√	√	√	-					
			LSZ/LCM [Light switching center]	√	√	√	√	√	√	-					
			MID [Multi Information Display]	√	√	√	√	√	√	-					
			PDC [Park Distance Control]	√	√	√	√	√	√	-					
			RAD [Radio]	√	√	√	√	√	√	-					
		SHD [Sliding/tilting sunroof]	√	√	√	√	√	√	-						

Series	Chassis	Module	ECU System	Funtions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	
			SPM/SM	√	√	√	√	√	-	
			SRS [Air bag]	√	√	√	√	√	-	
			URS [Rollover sensor]	√	√	√	√	√	-	
			VNC [Variable Camshaft Control]	√	√	√	√	√	-	
			ZKE [Central body electronic]	√	√	√	√	√	-	
		Auto Scan								
		Auto Scan Fast								
	Driver and Chassis			CAS [Car Access System]	√	√	√	√	√	-
				DDE [Diesel Electronics]	√	√	√	√	√	-
				DME [Digital Motor Electronics]	√	√	√	√	√	-
				EGS [Transmission control]	√	√	√	√	√	-
				EKPS [Fuel-pump control]	√	√	√	√	√	-
				GWS [Gear selector switch]	√	√	√	√	√	-
				SMG [Sequential Manual Gearbox]	√	√	√	√	√	-
				VTC [Valvetronic]	√	√	√	√	√	-
				VTC2 [Valvetronic 2]	√	√	√	√	√	-
				AL [Active steering]	√	√	√	√	√	-
				ARS2 [Dynamic Drive 2]	√	√	√	√	√	-
				DSC [Dynamic Stability Control]	√	√	√	√	√	√
				DSC [Dynamic Stability Control PLUS]	√	√	√	√	√	√
				DSC [Dynamic Stability Control Premium]	√	√	√	√	√	√
				EDC [Damper Control]	√	√	√	√	√	-
				LDM [Longitudinal Dynamics Management]	√	√	√	√	√	-
				RDC [Tyre pressure control]	√	√	√	√	√	-
				ACSM/SRS [Crash Safety Module]	√	√	√	√	√	-
				AHL [Adaptive directional headlights]	√	√	√	√	√	-
				AMP [Amplifier]	√	√	√	√	√	-
				CA [Comfort Access system]	√	√	√	√	√	-
		CCC-A [Applications]	√	√	√	√	√	-		

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
			CCC-ANT [Aerial tuner]	✓	✓	✓	✓	✓	-
			CCC-ASK [Audio system controller]	✓	✓	✓	✓	✓	-
			CCC-BO [User interface]	✓	✓	✓	✓	✓	-
			CCC-GW [Gateway]	✓	✓	✓	✓	✓	-
			CDC [CD Changer]	✓	✓	✓	✓	✓	-
			CHAMP-BO [User interface]	✓	✓	✓	✓	✓	-
			CHAMP-GW [Gateway]	✓	✓	✓	✓	✓	-
			CID [Central Information Display]	✓	✓	✓	✓	✓	-
			CNAV [Navigation system, China]	✓	✓	✓	✓	✓	-
			CON [Controller]	✓	✓	✓	✓	✓	-
			CVM [Convertible-top module]	✓	✓	✓	✓	✓	-
			DVD-C [DVD Changer]	✓	✓	✓	✓	✓	-
			DWA [Antitheft alarm system]	✓	✓	✓	✓	✓	-
			FBZM [rear compartment, control centre, center console]	✓	✓	✓	✓	✓	-
			FLA [High Beam Assist]	✓	✓	✓	✓	✓	-
			HUD [Head-Up Display]	✓	✓	✓	✓	✓	-
			IHKA [Integrated automatic heating/air conditioning]	✓	✓	✓	✓	✓	-
			IHKA2 [Integrated automatic heating/air condition]	✓	✓	✓	✓	✓	-
			INSTR [Instrument cluster]	✓	✓	✓	✓	✓	-
			JNAV [Navigation system, Japan]	✓	✓	✓	✓	✓	-
			KBM [Body Basic Module]	✓	✓	✓	✓	✓	-
			KGM [Body Gateway Module]	✓	✓	✓	✓	✓	-
			KNAV [Navigation system, Korea]	✓	✓	✓	✓	✓	-
			LM2 AHL2 [Light module 2 with adaptive headlight]	✓	✓	✓	✓	✓	-
			LM2 [Light Module 2]	✓	✓	✓	✓	✓	-
			LM2 [Light Module 2 with adaptive headlight]	✓	✓	✓	✓	✓	-
			M-ASK-BO [User interface]	✓	✓	✓	✓	✓	-
			M-ASK-GW [Gateway]	✓	✓	✓	✓	✓	-
			MPM [Micro-power module]	✓	✓	✓	✓	✓	-

6'_E63/E64

Body



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
6 SERIES			NVE [Night Vision Electronics]	√	√	√	√	√	-
			PDC [Park Distance Control]	√	√	√	√	√	-
			RLS [Rain/Light Sensor]	√	√	√	√	√	-
			RLSS [Rain/light solar sensor]	√	√	√	√	√	-
			SBSL [Satellite, B-pillar, left]	√	√	√	√	√	-
			SBSR [Satellite, B-pillar, right]	√	√	√	√	√	-
			SDARS [Satellite tuner]	√	√	√	√	√	-
			SFZ [Satellite vehicle center]	√	√	√	√	√	-
			SGM-SIM [Safety and Gateway Module(SIM)]	√	√	√	√	√	-
			SGM-ZGM [Safety and Gateway Module(ZGM)]	√	√	√	√	√	-
			SHD [Sliding/tilting sunroof]	√	√	√	√	√	-
			SHZH [Independent/auxiliary heater]	√	√	√	√	√	-
			SINE [Siren and tilt sensor]	√	√	√	√	√	-
			SMBF [Seat module, passenger]	√	√	√	√	√	-
			SMFA [Seat module, driver]	√	√	√	√	√	-
			SVS [Language processing system]	√	√	√	√	√	-
			SZL [Switch center steering column]	√	√	√	√	√	-
			SZL2 [Steering column switch centre 2]	√	√	√	√	√	-
			SZM [Switching center, centre console]	√	√	√	√	√	-
			TCU [Telematic Control unit]	√	√	√	√	√	-
			TMBF [Door module, front passenger]	√	√	√	√	√	-
			TMFA [Door module, driver]	√	√	√	√	√	-
			SMF [Seat memory, driver]	√	√	√	√	√	-
			ULF [Universal charging and hands-free facility]	√	√	√	√	√	-
			ULF-SBX [Interface box]	√	√	√	√	√	-
			ULF-SBX-H [Interface box High]	√	√	√	√	√	-
			VM [Video Module]	√	√	√	√	√	-
			Auto Scan						
Auto Scan Fast									



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	
		Service function	Maintenance	CBS reset				Engine oil		
								Microfilter		
								Front brake		
								Rear brake		
								Vehicle check		
								Spark plugs		
								Break Fluid		
								Vehicle inspection		
								Exhaust emission inspection		
								Diesel particle filter		
				CBS correct				Vehicle inspection		
								Exhaust emission inspection		
					Delete transport mode					
					Steering-angle sensor					
				Programming,Coding,Service	E63/E64 1 = 630i	Service functions			1 Steering-angle sensor	
		E64_645Ci_2004	Service functions			Maintenance				
		Driver and Chassis	CAS [Car Access System]	√	√	√	√	√	-	
			DME/DDE [Digital motor/Diesel electronics]	√	√	√	√	√	-	
			EKPS [Electronic Fuel pump]	√	√	√	√	√	-	
			EGS/SMG [Transmission management]	√	√	√	√	√	-	
			VTG [Transfer case]	√	√	√	√	√	-	
			GWS [Gear selector switch]	√	√	√	√	√	-	
			AL [Active steering]	√	√	√	√	√	-	
			ICM [Integrated chassis management]	√	√	√	√	√	-	
			RDC [Tyre pressure control]	√	√	√	√	√	-	
			DSC [Dynamic Stability Control]	√	√	√	√	√	-	
			EMF [Parking brake]	√	√	√	√	√	-	
			HSR [Rear-axle slip-angle control]	√	√	√	√	√	-	

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
	6'_F12/F13		EPS [Electronic Power Steering]	√	√	√	√	√	-
			EHC [Electronic Ride-Height Control]	√	√	√	√	√	-
			VDM [Vertical Dynamics Management]	√	√	√	√	√	-
			EDCSVL [Damper satellite, front left]	√	√	√	√	√	-
			EDCSVR [Damper satellite, front right]	√	√	√	√	√	-
			EDCSHL [Damper satellite, rear left]	√	√	√	√	√	-
			EDCSHR [Damper satellite, rear right]	√	√	√	√	√	-
		Body	JBE [Junction-box electronics]	√	√	√	√	√	-
			ACSM/SRS [Crash Safety Module]	√	√	√	√	√	-
			SZL [Switch center steering column]	√	√	√	√	√	-
			TRSVC [All round view camera]	√	√	√	√	√	-
			SWW [Lane change warning]	√	√	√	√	√	-
			ZGM [Central Gateway Module]	√	√	√	√	√	-
			RSE [Rear Seat Entertainment]	√	√	√	√	√	-
			TCU/ULF [Telephone]	√	√	√	√	√	-
			HUD [Head-Up Display]	√	√	√	√	√	-
			VSW [Video switch]	√	√	√	√	√	-
			VM [Video Module]	√	√	√	√	√	-
			EMALI [Left electric motor reel]	√	√	√	√	√	-
			EMARE [Right electric motor reel]	√	√	√	√	√	-
			FZD [Function centre, roof]	√	√	√	√	√	-
			NVE [Night Vision Electronics]	√	√	√	√	√	-
			KAFAS [Camera based driver assist systems]	√	√	√	√	√	-
			FLA [High Beam Assist]	√	√	√	√	√	-
			INSTR [Instrument cluster]	√	√	√	√	√	-
			CIC/CHAMP [Car headunit platform]	√	√	√	√	√	-
			PDC [Park Distance Control]	√	√	√	√	√	-
			CON [Controller]	√	√	√	√	√	-
			FCON [Rear Compartment controller]	√	√	√	√	√	-



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
			SMFAH [Seat module, driver's side rear]	✓	✓	✓	✓	✓	-
			SMBFH [Seat module, passenger's side rear]	✓	✓	✓	✓	✓	-
			HKL [Rear-lid lift]	✓	✓	✓	✓	✓	-
			SMFA [Seat module, driver]	✓	✓	✓	✓	✓	-
			SMBF [Seat module, passenger]	✓	✓	✓	✓	✓	-
			AHM [Trailer module]	✓	✓	✓	✓	✓	-
			FRM [Footwell Module]	✓	✓	✓	✓	✓	-
			CID [Central Information Display]	✓	✓	✓	✓	✓	-
			FD [Rear compartment display]	✓	✓	✓	✓	✓	-
			FD2 [Rear compartment display 2]	✓	✓	✓	✓	✓	-
			RFK [Reversing camera]	✓	✓	✓	✓	✓	-
			IHKA [Integrated automatic heating/air conditioning]	✓	✓	✓	✓	✓	-
			FKA [Rear-cabin automatic A/C]	✓	✓	✓	✓	✓	-
			HKA [Rear-cabin automatic A/C]	✓	✓	✓	✓	✓	-
			AMP [Amplifier]	✓	✓	✓	✓	✓	-
			DVDC [DVD changer]	✓	✓	✓	✓	✓	-
		Auto Scan							
		Auto Scan Fast							
		Coding/Program	Maintenance		CBS reset	Engine oil			
						Front brake			
						Rear brake			
						Vehicle check			
						Break Fluid			
						Microfilter			
						Spark plugs			
						Vehicle inspection			
						Exhaust emission inspection			
			DME [Engine]	✓	✓	✓	✓	✓	-
			EGS [Transmission]	✓	✓	✓	✓	✓	-



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions							
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions		
	7'_E23 (~ 1988)	Driver and Chassis	EWS [Electronic immobilize system]	✓	✓	✓	✓	✓	-		
			GR [Cruise control]	✓	✓	✓	✓	✓	-		
			EML [Electronic throttle]	✓	✓	✓	✓	✓	-		
			ABS [Antilock brake]	✓	✓	✓	✓	✓	✓		
			EHC/EDC [Signal-axle air suspension]	✓	✓	✓	✓	✓	-		
		Body	AHK [Active Rear-Axle Kinematics]	✓	✓	✓	✓	✓	-		
			CVM [Convertible-top module]	✓	✓	✓	✓	✓	-		
			DWA [Burglar-alarm system]	✓	✓	✓	✓	✓	-		
			EKM [Electronic Body Module]	✓	✓	✓	✓	✓	-		
			GSA [Closed-Loop-Controlled Differential-Lock AWD]	✓	✓	✓	✓	✓	-		
			IHKA/IHKR [AC/heater]	✓	✓	✓	✓	✓	-		
			IKE/IKI/KOMBI [Instrument cluster]	✓	✓	✓	✓	✓	-		
			LSZ/LCM [Light switching center]	✓	✓	✓	✓	✓	-		
			MID [Multi Information Display]	✓	✓	✓	✓	✓	-		
			PDC [Park Distance Control]	✓	✓	✓	✓	✓	-		
			RAD [Radio]	✓	✓	✓	✓	✓	-		
			SHD [Sliding/tilting sunroof]	✓	✓	✓	✓	✓	-		
			SPM/SM	✓	✓	✓	✓	✓	-		
			SRS [Air bag]	✓	✓	✓	✓	✓	-		
			URS [Rollover sensor]	✓	✓	✓	✓	✓	-		
			VNC [Variable Camshaft Control]	✓	✓	✓	✓	✓	-		
			ZKE [Central body electronic]	✓	✓	✓	✓	✓	-		
			Auto Scan								
		Auto Scan Fast									
				Driver and Chassis	DME [Engine]	✓	✓	✓	✓	✓	-
					EGS [Transmission]	✓	✓	✓	✓	✓	-
					EWS [Electronic immobilize system]	✓	✓	✓	✓	✓	-
					GR [Cruise control]	✓	✓	✓	✓	✓	-
EML [Electronic throttle]	✓				✓	✓	✓	✓	-		

Series	Chassis	Module	ECU System	Funtions							
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions		
	7'_E32 (1988~1994)		ABS [Antilock brake]	√	√	√	√	√	√		
			EHC/EDC [Signal-axle air suspension]	√	√	√	√	√	-		
		Body	AHK [Active Rear-Axle Kinematics]	√	√	√	√	√	-		
			CVM [Convertible-top module]	√	√	√	√	√	-		
			DWA [Burglar-alarm system]	√	√	√	√	√	-		
			EKM [Electronic Body Module]	√	√	√	√	√	-		
			GSA [Closed-Loop-Controlled Differential-Lock AWD]	√	√	√	√	√	-		
			IHKA/IHKR [AC/heater]	√	√	√	√	√	-		
			IKE/IKI/KOMBI [Instrument cluster]	√	√	√	√	√	-		
			LSZ/LCM [Light switching center]	√	√	√	√	√	-		
			MID [Multi Information Display]	√	√	√	√	√	-		
			PDC [Park Distance Control]	√	√	√	√	√	-		
			RAD [Radio]	√	√	√	√	√	-		
			SHD [Sliding/tilting sunroof]	√	√	√	√	√	-		
			SPM/SM	√	√	√	√	√	-		
			SRS [Air bag]	√	√	√	√	√	-		
			URS [Rollover sensor]	√	√	√	√	√	-		
			VNC [Variable Camshaft Control]	√	√	√	√	√	-		
		ZKE [Central body electronic]	√	√	√	√	√	-			
			Auto Scan								
			Auto Scan Fast								
				Driver and Chassis	DME [Engine]	√	√	√	√	√	-
					DME2 [Digital Motor Electronics 2]	√	√	√	√	√	-
					EGS [Transmission]	√	√	√	√	√	-
					EWS [Electronic immobilize system]	√	√	√	√	√	-
					GR [Cruise control]	√	√	√	√	√	-
					EML [Electronic throttle]	√	√	√	√	√	-
ABS [Antilock brake]	√				√	√	√	√	√		
EHC/EDC [Signal-axle air suspension]	√				√	√	√	√	-		

Series	Chassis	Module	ECU System	Funtions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	
			LEW [Steering-angle sensor]	√	√	√	√	√	-	
			AIC [Automatic Interval Control]	√	√	√	√	√	-	
			BIT [Basic Interface Telephone]	√	√	√	√	√	-	
			BM [On-board monitor]	√	√	√	√	√	-	
			IHKA/IHKR [AC/heater]	√	√	√	√	√	-	
			IKE/IKI/KOMBI [Instrument cluster]	√	√	√	√	√	-	
			LSZ/LCM [Light switching center]	√	√	√	√	√	-	
			MFL [Multi-function steering wheel]	√	√	√	√	√	-	
			MID [Multi Information Display]	√	√	√	√	√	-	
			NAV [Navigation system]	√	√	√	√	√	-	
			PDC [Park Distance Control]	√	√	√	√	√	-	
		Body	RAD [Radio]	√	√	√	√	√	-	
			SES [Language-input system]	√	√	√	√	√	-	
			SHD [Sliding/tilting sunroof]	√	√	√	√	√	-	
			SPM/SM	√	√	√	√	√	-	
			SRS [Air bag]	√	√	√	√	√	-	
			SZM [Switching center, center console]	√	√	√	√	√	-	
			VID [Video Module]	√	√	√	√	√	-	
			ZKE [Central body electronic]	√	√	√	√	√	-	
			DSP [Digital Sound Processor]	√	√	√	√	√	-	
			FGB [Rear Compartment blower]	√	√	√	√	√	-	
			HKL [Rear-lid lift]	√	√	√	√	√	-	
			LRA [Headlight beam height control]	√	√	√	√	√	-	
			Auto Scan							
			Auto Scan Fast							
			Reset service interval indicator	[Oil service]						
				[Inspection]						
		[Time interval]								
		[Correct follow-on service]								



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
			[Display service interval status]						
		Programming,Coding ,Service	E38_Unit_Coding	SRS [Air bag]					
				IKE/IKI/KOMBI [Instrument cluster]					
				LSZ/LCM [Light switching center]					
				ZKE [Central body electronic]					
				PDC [Park Distance Control]					
		Driver and Chassis	CAS [Car Access System]	√	√	√	√	√	-
			DDE [Diesel Electronics]	√	√	√	√	√	-
			DME [Digital Motor Electronics]	√	√	√	√	√	-
			DME2 [Digital Motor Electronics 2]	√	√	√	√	√	-
			EGS [Transmission control]	√	√	√	√	√	-
			EKPS [Fuel-pump control]	√	√	√	√	√	-
			VTC [Valvetronic]	√	√	√	√	√	-
			VTC2 [Valvetronic 2]	√	√	√	√	√	-
			ARS [Dynamic Drive]	√	√	√	√	√	-
			ARS2 [Dynamic Drive 2]	√	√	√	√	√	-
			CIM [Chassis Integration Module]	√	√	√	√	√	-
			CIM2 [Chassis Integration Module 2]	√	√	√	√	√	-
			DSC [Dynamic Stability Control]	√	√	√	√	√	√
			EDC [Damper Control]	√	√	√	√	√	-
			EHC [Electronic Ride-Height Control]	√	√	√	√	√	-
			EMF [Parking brake]	√	√	√	√	√	-
			RDC [Tyre pressure control]	√	√	√	√	√	-
			AHL [Adaptive directional headlights]	√	√	√	√	√	-
			AHM [Trailer module]	√	√	√	√	√	-
			AMP [Amplifier]	√	√	√	√	√	-
		ANT [Aerial/antenna tuner]	√	√	√	√	√	-	
		ASK [Audio System Controller]	√	√	√	√	√	-	
		BZM [Control centre, centre console]	√	√	√	√	√	-	



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
7 SERIES		Body	CA [Comfort Access system]	✓	✓	✓	✓	✓	-
			CD [Control Display]	✓	✓	✓	✓	✓	-
			CD-GW [Control Display (Gateway)]/M-ASK-GW [Gateway]	✓	✓	✓	✓	✓	-
			CDC [CD Changer]	✓	✓	✓	✓	✓	-
			CNAV [Navigation system, China]	✓	✓	✓	✓	✓	-
			CON [Controller]	✓	✓	✓	✓	✓	-
			DVD-C [DVD Changer]	✓	✓	✓	✓	✓	-
			DWA [Antitheft alarm system]	✓	✓	✓	✓	✓	-
			FBZM [Rear compartment, control centre, center console]	✓	✓	✓	✓	✓	-
			FCON [Rear Compartment controller]	✓	✓	✓	✓	✓	-
			FD [Rear-cabin display]	✓	✓	✓	✓	✓	-
			FKA [Rear heater/air conditioning]	✓	✓	✓	✓	✓	-
			FLA [High Beam Assist]	✓	✓	✓	✓	✓	-
			HKL [Rear-lid lift]	✓	✓	✓	✓	✓	-
			IHKA [Integrated automatic heating/air conditioning]	✓	✓	✓	✓	✓	-
			INSTR [Instrument cluster]	✓	✓	✓	✓	✓	-
			JNAV [Navigation system, Japan]	✓	✓	✓	✓	✓	-
			KHI [Headset interface]	✓	✓	✓	✓	✓	-
			KNAV [Navigation system, Korea]	✓	✓	✓	✓	✓	-
			LM [Light Module]	✓	✓	✓	✓	✓	-
			LM2 AHL2 [Light module 2 with adaptive headlight 2]	✓	✓	✓	✓	✓	-
			LM2 [Light Module 2]	✓	✓	✓	✓	✓	-
			LM2 [Light Module 2 with adaptive headlight]	✓	✓	✓	✓	✓	-
			NAV [Navigation system]	✓	✓	✓	✓	✓	-
			NVE [Night Vision Electronics]	✓	✓	✓	✓	✓	-
			PDC [Park Distance Control]	✓	✓	✓	✓	✓	-
			PM/MPM [(Micro) Power module]	✓	✓	✓	✓	✓	-
			RLS [Rain/Light Sensor]	✓	✓	✓	✓	✓	-
SASL [Satellite, A-pillar, left]	✓	✓	✓	✓	✓	-			

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
	7'_E65/E66 (2000 ~)		SASR [Satellite, A-pillar, right]	√	√	√	√	√	-
			SBSL [Satellite, B-pillar, left]	√	√	√	√	√	-
			SBSR [Satellite, B-pillar, right]	√	√	√	√	√	-
			SDARS [Satellite tuner]	√	√	√	√	√	-
			SFZ [Satellite vehicle center]	√	√	√	√	√	-
			SG-FD [Control module, rear-compartment]	√	√	√	√	√	-
			SG-FD-GW [Control module, rear-compartment]	√	√	√	√	√	-
			SGM-SIM [Safety and Gateway Module(SIM)]	√	√	√	√	√	-
			SHD [Sliding/tilting sunroof]	√	√	√	√	√	-
			SHZH [Independent/auxiliary heater]	√	√	√	√	√	-
			SIM [Safety and Gateway Module]	√	√	√	√	√	-
			SINE [Siren and tilt sensor]	√	√	√	√	√	-
			SMBF [Seat module, passenger]	√	√	√	√	√	-
			SMBFH [Seat module, passenger's side rear]	√	√	√	√	√	-
			SMFA [Seat module, driver]	√	√	√	√	√	-
			SMFAH [Seat module, driver's side rear]	√	√	√	√	√	-
			SSBF [Satellite, seat, passenger]	√	√	√	√	√	-
			SSFA [Satellite, seat, driver]	√	√	√	√	√	-
			SSH [Satellite, seat, rear]	√	√	√	√	√	-
			STVL [Satellite, door, front left]	√	√	√	√	√	-
			STVR [Satellite, door, front right]	√	√	√	√	√	-
			SVS [Language processing system]	√	√	√	√	√	-
			SZL [Switch center steering column]	√	√	√	√	√	-
			SRS [Air bag]	√	√	√	√	√	-
			TMBFH [Door module, passenger's side rear]	√	√	√	√	√	-
			TMBFT [Door module, passenger door]	√	√	√	√	√	-
			TMFAH [Door module, driver's side rear]	√	√	√	√	√	-
			TMFAT [Door module, driver's door]	√	√	√	√	√	-
		TCU [Telematic Control unit]	√	√	√	√	√	-	



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions							
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions		
			VM [Video Module]	✓	✓	✓	✓	✓	-		
			WIM [Wiper module]	✓	✓	✓	✓	✓	-		
			ZGM [Central Gateway Module]	✓	✓	✓	✓	✓	-		
		Auto Scan									
		Auto Scan Fast									
		Service functions	Maintenance	CBS reset	Engine oil						
					Microfilter						
					Front brake						
					Rear brake						
					Vehicle check						
					Spark plugs						
					Break Fluid						
					Coolant						
					Vehicle inspection						
					Exhaust emission inspection						
					Diesel particle filter						
			Steering-angle sensor								
		Programming,Coding ,Service	E65/E66_Unit_Coding	E65/E66 1 = 745Li		Service functions		1 Steering-angle sensor			
				CAS [Car Access System]							
				INSTR [Instrument cluster]							
				LM [Light Module]							
				ACSM/SRS [Crash Safety Module]							
				SBSL [Satellite, B-pillar, left]							
				SBSR [Satellite, B-pillar, right]							
				SSBF [Satellite, seat, passenger]							
				SSFA [Satellite, seat, driver]							
				SSH [Satellite, seat, rear]							
		SZL [Switch center steering column]									
			CAS [Car Access System]	✓	✓	✓	✓	✓	-		

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
		Driver and Chassis	DME/DDE [Digital motor/Diesel electronics]	✓	✓	✓	✓	✓	-
			EKPS [Electronic Fuel pump]	✓	✓	✓	✓	✓	-
			EGS/SMG [Transmission management]	✓	✓	✓	✓	✓	-
			VTG [Transfer case]	✓	✓	✓	✓	✓	-
			GWS [Gear selector switch]	✓	✓	✓	✓	✓	-
			AL [Active steering]	✓	✓	✓	✓	✓	-
			ICM [Integrated chassis management]	✓	✓	✓	✓	✓	-
			RDC [Tyre pressure control]	✓	✓	✓	✓	✓	-
			DSC [Dynamic Stability Control]	✓	✓	✓	✓	✓	-
			EMF [Parking brake]	✓	✓	✓	✓	✓	-
			HSR [Rear-axle slip-angle control]	✓	✓	✓	✓	✓	-
			EPS [Electronic Power Steering]	✓	✓	✓	✓	✓	-
			EHC [Electronic Ride-Height Control]	✓	✓	✓	✓	✓	-
			VDM [Vertical Dynamics Management]	✓	✓	✓	✓	✓	-
			EDCSVL [Damper satellite, front left]	✓	✓	✓	✓	✓	-
			EDCSVR [Damper satellite, front right]	✓	✓	✓	✓	✓	-
			EDCSHL [Damper satellite, rear left]	✓	✓	✓	✓	✓	-
			EDCSHR [Damper satellite, rear right]	✓	✓	✓	✓	✓	-
			JBE [Junction-box electronics]	✓	✓	✓	✓	✓	-
			ACSM/SRS [Crash Safety Module]	✓	✓	✓	✓	✓	-
		SZL [Switch center steering column]	✓	✓	✓	✓	✓	-	
		TRSVC [All round view camera]	✓	✓	✓	✓	✓	-	
		SWW [Lane change warning]	✓	✓	✓	✓	✓	-	
		ZGM [Central Gateway Module]	✓	✓	✓	✓	✓	-	
		RSE [Rear Seat Entertainment]	✓	✓	✓	✓	✓	-	
		TCU/ULF [Telephone]	✓	✓	✓	✓	✓	-	
		HUD [Head-Up Display]	✓	✓	✓	✓	✓	-	
		VSW [Video switch]	✓	✓	✓	✓	✓	-	
		VM [Video Module]	✓	✓	✓	✓	✓	-	

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
	7" _F01/F02/F03/F04 (2009 ~)	BODY	EMALI [Left electric motor reel]	√	√	√	√	√	-
			EMARE [Right electric motor reel]	√	√	√	√	√	-
			FZD [Function centre, roof]	√	√	√	√	√	-
			NVE [Night Vision Electronics]	√	√	√	√	√	-
			KAFAS [Camera based driver assist systems]	√	√	√	√	√	-
			FLA [High Beam Assist]	√	√	√	√	√	-
			INSTR [Instrument cluster]	√	√	√	√	√	-
			CIC/CHAMP [Car headunit platform]	√	√	√	√	√	-
			PDC [Park Distance Control]	√	√	√	√	√	-
			CON [Controller]	√	√	√	√	√	-
			FCON [Rear Compartment controller]	√	√	√	√	√	-
			SMFAH [Seat module, driver's side rear]	√	√	√	√	√	-
			SMBFH [Seat module, passenger's side rear]	√	√	√	√	√	-
			HKL [Rear-lid lift]	√	√	√	√	√	-
			SMFA [Seat module, driver]	√	√	√	√	√	-
			SMBF [Seat module, passenger]	√	√	√	√	√	-
			AHM [Trailer module]	√	√	√	√	√	-
			FRM [Footwell Module]	√	√	√	√	√	-
			CID [Central Information Display]	√	√	√	√	√	-
			FD [Rear compartment display]	√	√	√	√	√	-
			FD2 [Rear compartment display 2]	√	√	√	√	√	-
			RFK [Reversing camera]	√	√	√	√	√	-
			IHKA [Integrated automatic heating/air conditioning]	√	√	√	√	√	-
			FKA [Rear-cabin automatic A/C]	√	√	√	√	√	-
			HKA [Rear-cabin automatic A/C]	√	√	√	√	√	-
			AMP [Amplifier]	√	√	√	√	√	-
			DVDC [DVD changer]	√	√	√	√	√	-
			Auto Scan						
	Auto Scan Fast								



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
		Coding/Program	Maintenance			CBS reset	Engine oil		
							Front brake		
							Rear brake		
							Vehicle check		
							Break Fluid		
							Microfilter		
							Spark plugs		
							Vehicle inspection		
							Exhaust emission inspection		
8 SERIES	8'_E31 (~ 1999)	Driver and Chassis	DME [Engine]	√	√	√	√	√	-
			EGS [Transmission]	√	√	√	√	√	-
			EWS [Electronic immobilize system]	√	√	√	√	√	-
			GR [Cruise control]	√	√	√	√	√	-
			EML [Electronic throttle]	√	√	√	√	√	-
			ABS [Antilock brake]	√	√	√	√	√	√
			EHC/EDC [Signal-axle air suspension]	√	√	√	√	√	-
		Body	AHK [Active Rear-Axle Kinematics]	√	√	√	√	√	-
			CVM [Convertible-top module]	√	√	√	√	√	-
			DWA [Burglar-alarm system]	√	√	√	√	√	-
			EKM [Electronic Body Module]	√	√	√	√	√	-
			GSA [Closed-Loop-Controlled Differential-Lock AWD]	√	√	√	√	√	-
			IHKA/IHKR [AC/heater]	√	√	√	√	√	-
			IKE/IKI/KOMBI [Instrument cluster]	√	√	√	√	√	-
			LSZ/LCM [Light switching center]	√	√	√	√	√	-
			MID [Multi Information Display]	√	√	√	√	√	-
			PDC [Park Distance Control]	√	√	√	√	√	-
			RAD [Radio]	√	√	√	√	√	-
			SHD [Sliding/tilting sunroof]	√	√	√	√	√	-
			SPM/SM	√	√	√	√	√	-

FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
			SRS [Air bag]	✓	✓	✓	✓	✓	-
			URS [Rollover sensor]	✓	✓	✓	✓	✓	-
			VNC [Variable Camshaft Control]	✓	✓	✓	✓	✓	-
			ZKE [Central body electronic]	✓	✓	✓	✓	✓	-
		Auto Scan							
		Auto Scan Fast							
		Driver and Chassis	CAS [Car Access System]	✓	✓	✓	✓	✓	-
			DME [Digital Motor Electronics]	✓	✓	✓	✓	✓	-
			DDE [Diesel Electronics]	✓	✓	✓	✓	✓	-
			EGS [Transmission control]	✓	✓	✓	✓	✓	-
			GWS [Gear selector switch]	✓	✓	✓	✓	✓	-
			EKPS [Fuel-pump control]	✓	✓	✓	✓	✓	-
			VTG [Transfer case]	✓	✓	✓	✓	✓	-
			QMVH [Lateral-moment distribution, rear axle]	✓	✓	✓	✓	✓	-
			VTC [Valvetronic]	✓	✓	✓	✓	✓	-
			VTC2 [Valvetronic 2]	✓	✓	✓	✓	✓	-
			AL [Active steering]	✓	✓	✓	✓	✓	-
			ARS [Dynamic Drive]	✓	✓	✓	✓	✓	-
			DSC [Dynamic Stability Control]	✓	✓	✓	✓	✓	✓
			EHC [Electronic Ride-Height Control]	✓	✓	✓	✓	✓	-
			EMF [Parking brake]	✓	✓	✓	✓	✓	-
			LDM [Longitudinal Dynamics Management]	✓	✓	✓	✓	✓	-
			RDC [Tyre pressure control]	✓	✓	✓	✓	✓	-
			VDM [Vertical Dynamics Management]	✓	✓	✓	✓	✓	-
			ACSM/SRS [Crash Safety Module]	✓	✓	✓	✓	✓	-
			AHM [Trailer module]	✓	✓	✓	✓	✓	-
		AMPH [Hi-Fi amplifier]	✓	✓	✓	✓	✓	-	
		AMPT [Top Hi-Fi amplifier]	✓	✓	✓	✓	✓	-	
		CA [Comfort Access system]	✓	✓	✓	✓	✓	-	

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
	X1_E84 (2011 ~)	BODY	CCC-A [Applications]	√	√	√	√	√	-
CCC-ANT [Aerial tuner]			√	√	√	√	√	-	
CCC-ASK [Audio system controller]			√	√	√	√	√	-	
CCC-BO [User interface]			√	√	√	√	√	-	
CCC-GW [Gateway]			√	√	√	√	√	-	
CDC [CD Changer]			√	√	√	√	√	-	
CHAMP-BO [User interface]			√	√	√	√	√	-	
CHAMP-GW [Gateway]			√	√	√	√	√	-	
CID [Central Information Display]			√	√	√	√	√	-	
CNAV [Navigation system, China]			√	√	√	√	√	-	
CON [Controller]			√	√	√	√	√	-	
DVD-C [DVD Changer]			√	√	√	√	√	-	
DWA [Antitheft alarm system]			√	√	√	√	√	-	
FD [Rear-cabin display]			√	√	√	√	√	-	
FKA [Rear heater/air conditioning]			√	√	√	√	√	-	
FLA [High Beam Assist]			√	√	√	√	√	-	
FRM2 [Footwell module 2]			√	√	√	√	√	-	
FZD [Function Center, Roof]			√	√	√	√	√	-	
HKL [Rear-lid lift]			√	√	√	√	√	-	
HUD [Head-Up Display]			√	√	√	√	√	-	
IHKA [Integrated automatic heating/air conditioning]			√	√	√	√	√	-	
INSTR [Instrument cluster]			√	√	√	√	√	-	
JBE2 [Junction Box electronics 2]			√	√	√	√	√	-	
JNAV [Navigation system, Japan]			√	√	√	√	√	-	
KHM [Headphones module]			√	√	√	√	√	-	
KNAV [Navigation system, Korea]			√	√	√	√	√	-	
M-ASK-BO [User interface]			√	√	√	√	√	-	
M-ASK-GW [Gateway]			√	√	√	√	√	-	
PDC [Park Distance Control]	√	√	√	√	√	-			



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
			RFK [Reversing camera]	√	√	√	√	√	-
			RLSS [Rain/light solar sensor]	√	√	√	√	√	-
			SDARS [Satellite tuner]	√	√	√	√	√	-
			SINE [Siren and tilt sensor]	√	√	√	√	√	-
			SMBF [Seat module, passenger]	√	√	√	√	√	-
			SMFA [Seat module, driver]	√	√	√	√	√	-
			TCU [Telematic Control unit]	√	√	√	√	√	-
			ULF-SBX [Interface box]	√	√	√	√	√	-
			ULF-SBX-H [Interface box High]	√	√	√	√	√	-
			VM [Video Module]	√	√	√	√	√	-
			VSW [Video switch]	√	√	√	√	√	-
			CBX [CBX-ECALL]	√	√	√	√	√	-
		Auto Scan							
		Auto Scan Fast							
		Service function	Maintenance	CBS reset	Engine oil				
					Microfilter				
					Front brake				
					Rear brake				
					Vehicle check				
					Spark plugs				
			Break Fluid						
			Vehicle inspection						
			Exhaust emission inspection						
			Diesel particle filter						
			DME [Engine]	√	√	√	√	√	-
			DDE [Diesel Electronics]	√	√	√	√	√	-
			EGS [Transmission]	√	√	√	√	√	-
			EWS [Electronic immobilize system]	√	√	√	√	√	-
			VTG [Transfer case]	√	√	√	√	√	-



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
	X3_E83	Driver and Chassis	EKPS [Fuel-pump control]	√	√	√	√	√	-
			DSC [Dynamic Stability Control]	√	√	√	√	√	√
			LEW [Steering-angle sensor]	√	√	√	√	√	-
			RDC [Tyre pressure control]	√	√	√	√	√	-
			ABS [Antilock brake]	√	√	√	√	√	-
			SVT [Servotronic]	√	√	√	√	√	-
		Body	AIC [Automatic Interval Control]	√	√	√	√	√	-
			CID [Central Information Display]	√	√	√	√	√	-
			IHKA/IHKR [AC/heater]	√	√	√	√	√	-
			IKE/IKI/KOMBI [Instrument cluster]	√	√	√	√	√	-
			LSZ/LCM [Light switching center]	√	√	√	√	√	-
			MFL [Multi-function steering wheel]	√	√	√	√	√	-
			NAV [Navigation system]	√	√	√	√	√	-
			PDC [Park Distance Control]	√	√	√	√	√	-
			RAD [Radio]	√	√	√	√	√	-
			SES Language-input System	√	√	√	√	√	-
			SHD [Sliding/tilting sunroof]	√	√	√	√	√	-
			SMF Driver Seat Memory	√	√	√	√	√	-
			SRS [Air bag]	√	√	√	√	√	-
			VID [Video Module]	√	√	√	√	√	-
			ZKE [Central body electronic]	√	√	√	√	√	-
			DSP [Digital Sound Processor]	√	√	√	√	√	-
			CDC [CD Changer]	√	√	√	√	√	-
			RLSS [Solar Rain/light Sensor]	√	√	√	√	√	-
			SZM [Switching center, center console]	√	√	√	√	√	-
			ULF-SBX [Interface box]	√	√	√	√	√	-
		Auto Scan							
		Auto Scan Fast							
		Service function	Reset service interval indicator						



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
			SZL [Switch center steering column]	√	√	√	√	√	-
			TRSVC [All round view camera]	√	√	√	√	√	-
			SWW [Lane change warning]	√	√	√	√	√	-
			ZGM [Central Gateway Module]	√	√	√	√	√	-
			RSE [Rear Seat Entertainment]	√	√	√	√	√	-
			TCU/ULF [Telephone]	√	√	√	√	√	-
			HUD [Head-Up Display]	√	√	√	√	√	-
			VSW [Video switch]	√	√	√	√	√	-
			VM [Video Module]	√	√	√	√	√	-
			EMALI [Left electric motor reel]	√	√	√	√	√	-
			EMARE [Right electric motor reel]	√	√	√	√	√	-
			FZD [Function centre, roof]	√	√	√	√	√	-
			NVE [Night Vision Electronics]	√	√	√	√	√	-
			KAFAS [Camera based driver assist systems]	√	√	√	√	√	-
			FLA [High Beam Assist]	√	√	√	√	√	-
			INSTR [Instrument cluster]	√	√	√	√	√	-
			CIC/CHAMP [Car headunit platform]	√	√	√	√	√	-
			PDC [Park Distance Control]	√	√	√	√	√	-
			CON [Controller]	√	√	√	√	√	-
			FCON [Rear Compartment controller]	√	√	√	√	√	-
			SMFAH [Seat module, driver's side rear]	√	√	√	√	√	-
			SMBFH [Seat module, passenger's side rear]	√	√	√	√	√	-
			HKL [Rear-lid lift]	√	√	√	√	√	-
			SMFA [Seat module, driver]	√	√	√	√	√	-
			SMBF [Seat module, passenger]	√	√	√	√	√	-
			AHM [Trailer module]	√	√	√	√	√	-
			FRM [Footwell Module]	√	√	√	√	√	-
			CID [Central Information Display]	√	√	√	√	√	-
			FD [Rear compartment display]	√	√	√	√	√	-

X3_F25

Body



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions							
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions		
			FD2 [Rear compartment display 2]	√	√	√	√	√	-		
			RFK [Reversing camera]	√	√	√	√	√	-		
			IHKA [Integrated automatic heating/air conditioning]	√	√	√	√	√	-		
			FKA [Rear-cabin automatic A/C]	√	√	√	√	√	-		
			HKA [Rear-cabin automatic A/C]	√	√	√	√	√	-		
			AMP [Amplifier]	√	√	√	√	√	-		
			DVDC [DVD changer]	√	√	√	√	√	-		
		Auto Scan									
		Auto Scan Fast									
		Coding/Program	Maintenance	CBS reset	Engine oil						
					Front brake						
					Rear brake						
					Vehicle check						
					Break Fluid						
					Microfilter						
					Spark plugs						
					Vehicle inspection						
		Exhaust emission inspection									
		Driver and Chassis			DME [Engine]	√	√	√	√	√	-
					DDE [Diesel Electronics]	√	√	√	√	√	-
EGS [Transmission]	√				√	√	√	√	-		
EWS [Electronic immobilize system]	√				√	√	√	√	-		
VTG [Gearbox control]	√				√	√	√	√	-		
DSC [Dynamic Stability Control]	√				√	√	√	√	√		
EHC/EDC [Signal-axle air suspension]	√				√	√	√	√	-		
LEW [Steering-angle sensor]	√				√	√	√	√	-		
RDC [Tyre pressure control]	√				√	√	√	√	-		
AIC [Automatic Interval Control]	√				√	√	√	√	-		
				BIT [Basic Interface Telephone]	√	√	√	√	√	-	



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
X SERIES	X5_E53 (1999 ~)		BM [On-board monitor]	√	√	√	√	√	-
			IHKA/IHKR [AC/heater]	√	√	√	√	√	-
			IKE/IKI/KOMBI [Instrument cluster]	√	√	√	√	√	-
			LSZ/LCM [Light switching center]	√	√	√	√	√	-
			MFL [Multi-function steering wheel]	√	√	√	√	√	-
			NAV [Navigation system]	√	√	√	√	√	-
			PDC [Park Distance Control]	√	√	√	√	√	-
			RAD [Radio]	√	√	√	√	√	-
			SES [Language-input system]	√	√	√	√	√	-
			SHD [Sliding/tilting sunroof]	√	√	√	√	√	-
			SPM/SM	√	√	√	√	√	-
			SRS [Air bag]	√	√	√	√	√	-
			SZM [Switching center, center console]	√	√	√	√	√	-
			VID [Video Module]	√	√	√	√	√	-
			ZKE [Central body electronic]	√	√	√	√	√	-
			DSP [Digital Sound Processor]	√	√	√	√	√	-
			RLSS Solar Rain/light Sensor	√	√	√	√	√	-
		Auto Scan							
		Auto Scan Fast							
		Service function	Reset service interval indicator						
			X5	Programming, Coding					
				DME					
				EGS					
				EWS					
				LEW					
				A/C					
				SRS					
				IKE					
				LCM					
				ZKE					



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
		Programming,Coding ,Service					AIC		
							RAD		
							SZM		
			Service functions			1 Adjustment, sensors<			
			E53_X5(3.0i)_2002	Recoding/Reprogramming			SRS		
							IKE		
							LCM		
							ZKE		
			Chassis			DSC[Dynamic Stability]			
			Body			IKE[Instrument cluster]			
		Coding/Program			LEW[Steering-angle sensor]				
		E53_X5(3.0i)_2005	ABS/ASC/DSC			Steering angle sensor matching			
		Driver and Chassis	CAS [Car Access System]	✓	✓	✓	✓	✓	-
			DDE [Diesel Electronics]	✓	✓	✓	✓	✓	-
			DME [Digital Motor Electronics]	✓	✓	✓	✓	✓	-
			EGS [Transmission control]	✓	✓	✓	✓	✓	-
			GWS [Gear selector switch]	✓	✓	✓	✓	✓	-
			EKPS [Fuel-pump control]	✓	✓	✓	✓	✓	-
			QMVH [Lateral-moment distribution, rear axle]	✓	✓	✓	✓	✓	-
			VTC [Valvetronic]	✓	✓	✓	✓	✓	-
VTC2 [Valvetronic 2]	✓		✓	✓	✓	✓	-		
VTG [Transfer case]	✓		✓	✓	✓	✓	-		
AL [Active steering]	✓	✓	✓	✓	✓	-			
ARS [Dynamic Drive]	✓	✓	✓	✓	✓	-			
DSC [Dynamic Stability Control]	✓	✓	✓	✓	✓	✓			
EHC [Electronic Ride-Height Control]	✓	✓	✓	✓	✓	-			
EMF [Parking brake]	✓	✓	✓	✓	✓	-			
RDC [Tyre pressure control]	✓	✓	✓	✓	✓	-			
VDM [Vertical Dynamics Management]	✓	✓	✓	✓	✓	-			



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
			LDM [Longitudinal Dynamics Management]	✓	✓	✓	✓	✓	-
			EDC [Damper Control]	✓	✓	✓	✓	✓	-
		Body	ACSM/SRS [Crash Safety Module]	✓	✓	✓	✓	✓	-
			AHM [Trailer module]	✓	✓	✓	✓	✓	-
			AMPH [Hi-Fi amplifier]	✓	✓	✓	✓	✓	-
			AMPT [Top Hi-Fi amplifier]	✓	✓	✓	✓	✓	-
			CA [Comfort Access system]	✓	✓	✓	✓	✓	-
			CCC-A [Applications]	✓	✓	✓	✓	✓	-
			CCC-ANT [Aerial tuner]	✓	✓	✓	✓	✓	-
			CCC-ASK [Audio system controller]	✓	✓	✓	✓	✓	-
			CCC-BO [User interface]	✓	✓	✓	✓	✓	-
			CCC-GW [Gateway]	✓	✓	✓	✓	✓	-
			CDC [CD Changer]	✓	✓	✓	✓	✓	-
			CHAMP-BO [User interface]	✓	✓	✓	✓	✓	-
			CHAMP-GW [Gateway]	✓	✓	✓	✓	✓	-
			CID [Central Information Display]	✓	✓	✓	✓	✓	-
			CNAV [Navigation system, China]	✓	✓	✓	✓	✓	-
			CON [Controller]	✓	✓	✓	✓	✓	-
			DVD-C [DVD Changer]	✓	✓	✓	✓	✓	-
			FD [Rear-cabin display]	✓	✓	✓	✓	✓	-
			FKA [Rear heater/air conditioning]	✓	✓	✓	✓	✓	-
			FLA [High Beam Assist]	✓	✓	✓	✓	✓	-
			FRM2 [Footwell module 2]	✓	✓	✓	✓	✓	-
			FZD [Function Center, Roof]	✓	✓	✓	✓	✓	-
			HKL [Rear-lid lift]	✓	✓	✓	✓	✓	-
		HUD [Head-Up Display]	✓	✓	✓	✓	✓	-	
		IHKA [Integrated automatic heating/air conditioning]	✓	✓	✓	✓	✓	-	
		INSTR [Instrument cluster]	✓	✓	✓	✓	✓	-	
	X5_E70		JBE2 [Junction Box electronics 2]	✓	✓	✓	✓	✓	-



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions										
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions					
			JNAV [Navigation system, Japan]	✓	✓	✓	✓	✓	-					
			KHM [Headphones module]	✓	✓	✓	✓	✓	-					
			KNAV [Navigation system, Korea]	✓	✓	✓	✓	✓	-					
			M-ASK-BO [User interface]	✓	✓	✓	✓	✓	-					
			M-ASK-GW [Gateway]	✓	✓	✓	✓	✓	-					
			PDC [Park Distance Control]	✓	✓	✓	✓	✓	-					
			RFK [Reversing camera]	✓	✓	✓	✓	✓	-					
			RLSS [Rain/light solar sensor]	✓	✓	✓	✓	✓	-					
			SDARS [Satellite tuner]	✓	✓	✓	✓	✓	-					
			SINE [Siren and tilt sensor]	✓	✓	✓	✓	✓	-					
			SMBF [Seat module, passenger]	✓	✓	✓	✓	✓	-					
			SMFA [Seat module, driver]	✓	✓	✓	✓	✓	-					
			TCU [Telematic Control unit]	✓	✓	✓	✓	✓	-					
			ULF-SBX [Interface box]	✓	✓	✓	✓	✓	-					
			ULF-SBX-H [Interface box High]	✓	✓	✓	✓	✓	-					
			VM [Video Module]	✓	✓	✓	✓	✓	-					
			VSW [Video switch]	✓	✓	✓	✓	✓	-					
			DWA [Antitheft alarm system]	✓	✓	✓	✓	✓	-					
			CBX [CBX-ECALL]	✓	✓	✓	✓	✓	-					
		Auto Scan												
		Auto Scan Fast												
		Service function	Maintenance			CBS reset	Engine oil	Microfilter	Front brake	Rear brake	Vehicle check	Spark plugs	Break Fluid	Vehicle inspection



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions							
				Sys. Info.	Read code	Clear code	Data Stream	Actuatio n	Special Functions		
							Exhaust emission inspection				
							Diesel particle filter				
			Steering-angle sensor								
		Programming,Coding ,Service	E70_X5(3.0si)_2008		Coding/Program			Maintenance			
							Service functions				
					CAS [Car Access System]						
					FZD [Function Center, Roof]						
					KBM [Body Basic Module]						
					INSTR [Instrument cluster]						
					CCC-B0 [User interface]						
					ACSM/SRS [Crash Safety Module]						
					PDC [Park Distance Control]						
					SGM-ZGM [Safety and Gateway Module (ZGM)]						
		Driver and Chassis	E70_X5		CAS [Car Access System]	√	√	√	√	√	-
					DDE [Diesel Electronics]	√	√	√	√	√	-
					DME [Digital Motor Electronics]	√	√	√	√	√	-
					EGS [Transmission control]	√	√	√	√	√	-
					GWS [Gear selector switch]	√	√	√	√	√	-
					EKPS [Fuel-pump control]	√	√	√	√	√	-
					QMVH [Lateral-moment distribution, rear axle]	√	√	√	√	√	-
	VTG [Transfer case]			√	√	√	√	√	-		
	AL [Active steering]			√	√	√	√	√	-		
	ARS [Dynamic Drive]			√	√	√	√	√	-		
	DSC [Dynamic Stability Control]			√	√	√	√	√	√		
	EHC [Electronic Ride-Heiht Control]			√	√	√	√	√	-		
	EMF [Parking brake]			√	√	√	√	√	-		
	ICM [Integrated chassis management]			√	√	√	√	√	-		
	RDC [Tyre pressure control]	√	√	√	√	√	-				
	VDM [Vertical Dynamics Management]	√	√	√	√	√	-				

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
			ASCM/SRS [Crash Safety Module]	✓	✓	✓	✓	✓	-
			AHM [Trailer module]	✓	✓	✓	✓	✓	-
			AMPH [Hi-Fi amplifier]	✓	✓	✓	✓	✓	-
			AMPT [Top Hi-Fi amplifier]	✓	✓	✓	✓	✓	-
			CA [Comfort Access system]	✓	✓	✓	✓	✓	-
			CCC-A [Applications]	✓	✓	✓	✓	✓	-
			CCC-ANT [Aerial tuner]	✓	✓	✓	✓	✓	-
			CCC-ASK [Audio system controller]	✓	✓	✓	✓	✓	-
			CCC-BO [User interface]	✓	✓	✓	✓	✓	-
			CCC-GW [Gateway]	✓	✓	✓	✓	✓	-
			CDC [CD Changer]	✓	✓	✓	✓	✓	-
			CHAMP-BO [User Interface]	✓	✓	✓	✓	✓	-
			CHAMP-GW Gateway	✓	✓	✓	✓	✓	-
			CID [Central Information Display]	✓	✓	✓	✓	✓	-
			CNAV [Navigation system, China]	✓	✓	✓	✓	✓	-
			CON [Controller]	✓	✓	✓	✓	✓	-
			DVD-C [DVD Changer]	✓	✓	✓	✓	✓	-
			FD [Rear compartment display]	✓	✓	✓	✓	✓	-
			FKA [Rear heater/air conditioning]	✓	✓	✓	✓	✓	-
			FLA [High Beam Assist]	✓	✓	✓	✓	✓	-
			FRM2 [Footwell module 2]	✓	✓	✓	✓	✓	-
			FZD [Function Center, Roof]	✓	✓	✓	✓	✓	-
			HKL [Rear-lid lift]	✓	✓	✓	✓	✓	-
			HUD [Head-Up Display]	✓	✓	✓	✓	✓	-
			IHKA [Integrated automatic heating/air conditioning]	✓	✓	✓	✓	✓	-
			INSTR [Instrument cluster]	✓	✓	✓	✓	✓	-
			JBE2 [Junction Box electronics 2]	✓	✓	✓	✓	✓	-
			JNAV [Navigation system, Japan]	✓	✓	✓	✓	✓	-
			KHI [Headset interface]	✓	✓	✓	✓	✓	-

X6_E71

Body



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
			KNAV [Navigation system, Korea]	✓	✓	✓	✓	✓	-
			M-ASK-BO [User interface]	✓	✓	✓	✓	✓	-
			M-ASK-GW [Gateway]	✓	✓	✓	✓	✓	-
			PDC [Park Distance Control]	✓	✓	✓	✓	✓	-
			RFK [Reversing camera]	✓	✓	✓	✓	✓	-
			RLSS [Rain/light solar sensor]	✓	✓	✓	✓	✓	-
			SDARS [Satellite tuner]	✓	✓	✓	✓	✓	-
			SINE [Siren and tilt sensor]	✓	✓	✓	✓	✓	-
			SMBF [Seat module, passenger]	✓	✓	✓	✓	✓	-
			SMFA [Seat module, driver]	✓	✓	✓	✓	✓	-
			TCU [Telematic Control unit]	✓	✓	✓	✓	✓	-
			ULF-SBX [Interface box]	✓	✓	✓	✓	✓	-
			ULF-SBX-H [Interface box High]	✓	✓	✓	✓	✓	-
			VM [Video Module]	✓	✓	✓	✓	✓	-
			VSW [Video switch]	✓	✓	✓	✓	✓	-
		Auto Scan							
		Auto Scan Fast							
		Service function	Maintenance		CBS reset	Engine oil			
						Microfilter			
						Front brake			
						Rear brake			
						Vehicle check			
						Spark plugs			
						Break Fluid			
						Vehicle inspection			
						Exhaust emission inspection			
						Diesel particle filter			
			Steering-angle sensor						
						DME [Digital Motor Electronics]			



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
		Programming,Coding ,Service	E71_X6(35i)_2008	DRIVE			EGS[Transmission control]		
			E71_X6_2010	Coding/Program			Maintenance		Service functions
				Recoding			SRS(airbag)		
			E71_X6	CAS [Car Access System]					
				FZD [Function Center, Roof]					
				KBM [Body Basic Module]					
				INSTR [Instrument cluster]					
				CCC-BO [User interface]					
				ACSM/SRS [Crash Safety Module]					
				PDC [Park Distance Control]					
SGM-ZGM [Safety and Gateway Module(ZGM)]									
Z1_E30 (~ 1993)	Driver and Chassis	DME [Engine]	✓	✓	✓	✓	✓	-	
		EGS [Transmission]	✓	✓	✓	✓	✓	-	
		EWS [Electronic immobilize system]	✓	✓	✓	✓	✓	-	
		GR [Cruise control]	✓	✓	✓	✓	✓	-	
		EML [Electronic throttle]	✓	✓	✓	✓	✓	-	
		ABS [Antilock brake]	✓	✓	✓	✓	✓	✓	
		EHC/EDC [Signal-axle air suspension]	✓	✓	✓	✓	✓	-	
		AHK [Active Rear-Axle Kinematics]	✓	✓	✓	✓	✓	-	
		CVM [Convertible-top module]	✓	✓	✓	✓	✓	-	
		DWA [Burglar-alarm system]	✓	✓	✓	✓	✓	-	
	Body	EKM [Electronic Body Module]	✓	✓	✓	✓	✓	-	
		GSA [Closed-Loop-Controlled Differential-Lock AWD]	✓	✓	✓	✓	✓	-	
		IHKA/IHKR [AC/heater]	✓	✓	✓	✓	✓	-	
		IKE/IKI/KOMBI [Instrument cluster]	✓	✓	✓	✓	✓	-	
		LSZ/LCM [Light switching center]	✓	✓	✓	✓	✓	-	
		MID [Multi Information Display]	✓	✓	✓	✓	✓	-	
		PDC [Park Distance Control]	✓	✓	✓	✓	✓	-	

FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	
			RAD [Radio]	√	√	√	√	√	-	
			SHD [Sliding/tilting sunroof]	√	√	√	√	√	-	
			SPM/SM	√	√	√	√	√	-	
			SRS [Air bag]	√	√	√	√	√	-	
			URS [Rollover sensor]	√	√	√	√	√	-	
			VNC [Variable Camshaft Control]	√	√	√	√	√	-	
			ZKE [Central body electronic]	√	√	√	√	√	-	
		Auto Scan								
		Auto Scan Fast								
	Z3_E36 (1993 ~ 2000)	Driver and Chassis		DME [Engine]	√	√	√	√	√	-
				EGS [Transmission]	√	√	√	√	√	-
				EWS [Electronic immobilize system]	√	√	√	√	√	-
				GR [Cruise control]	√	√	√	√	√	-
				EML [Electronic throttle]	√	√	√	√	√	-
				ABS [Antilock brake]	√	√	√	√	√	√
				EHC/EDC [Signal-axle air suspension]	√	√	√	√	√	-
		Body		AHK [Active Rear-Axle Kinematics]	√	√	√	√	√	-
				CVM [Convertible-top module]	√	√	√	√	√	-
				DWA [Burglar-alarm system]	√	√	√	√	√	-
				EKM [Electronic Body Module]	√	√	√	√	√	-
				GSA [Closed-Loop-Controlled Differential-Lock AWD]	√	√	√	√	√	-
				IHKA/IHKR [AC/heater]	√	√	√	√	√	-
				IKE/IKI/KOMBI [Instrument cluster]	√	√	√	√	√	-
				LSZ/LCM [Light switching center]	√	√	√	√	√	-
				MID [Multi Information Display]	√	√	√	√	√	-
				PDC [Park Distance Control]	√	√	√	√	√	-
				RAD [Radio]	√	√	√	√	√	-
SHD [Sliding/tilting sunroof]	√	√	√	√	√	-				
SPM/SM	√	√	√	√	√	-				



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
			SRS [Air bag]	✓	✓	✓	✓	✓	-
			URS [Rollover sensor]	✓	✓	✓	✓	✓	-
			VNC [Variable Camshaft Control]	✓	✓	✓	✓	✓	-
			ZKE [Central body electronic]	✓	✓	✓	✓	✓	-
		Auto Scan							
		Auto Scan Fast							
		Z4_E85/E86	Driver and Chassis	DME [Engine]	✓	✓	✓	✓	✓
	EGS [Transmission]			✓	✓	✓	✓	✓	-
	EWS [Electronic immobilize system]			✓	✓	✓	✓	✓	-
	EKPS [Fuel-pump control]			✓	✓	✓	✓	✓	-
	ABS [Antilock brake]			✓	✓	✓	✓	✓	✓
	EPS [Electronic Power Steering]			✓	✓	✓	✓	✓	-
	LEW [Steering-angle sensor]			✓	✓	✓	✓	✓	-
	Body		AIC [Automatic Interval Control]	✓	✓	✓	✓	✓	-
			CID [Central Information Display]	✓	✓	✓	✓	✓	-
			CVM [Convertible-top module]	✓	✓	✓	✓	✓	-
			IHKA/IHKR [AC/heater]	✓	✓	✓	✓	✓	-
			IKE/IKI/KOMBI [Instrument cluster]	✓	✓	✓	✓	✓	-
			LSZ/LCM [Light switching center]	✓	✓	✓	✓	✓	-
			PDC [Park Distance Control]	✓	✓	✓	✓	✓	-
			RAD [Radio]	✓	✓	✓	✓	✓	-
			SBSL [Satellite, B-pillar, left]	✓	✓	✓	✓	✓	-
			SBSR [Satellite, B-pillar, right]	✓	✓	✓	✓	✓	-
			SIM [Safety and Information Module]	✓	✓	✓	✓	✓	-
			SMF [Seat memory, driver]	✓	✓	✓	✓	✓	-
			SZM [Switching center, center console]	✓	✓	✓	✓	✓	-
	VID [Video Module]	✓	✓	✓	✓	✓	-		
ZKE [Central body electronic]	✓	✓	✓	✓	✓	-			
Auto Scan									



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	
Z SERIES		Auto Scan Fast								
		Reset service interval indicator	[Oil service]							
			[Inspection]							
			[Time interval]							
			[Correct follow-on service]							
			[Display service interval status]							
	Driver and Chassis		CAS [Car Access System]	✓	✓	✓	✓	✓	-	
			DME [Digital Motor Electronics]	✓	✓	✓	✓	✓	-	
			DKG [Twin-clutch gearbox]	✓	✓	✓	✓	✓	-	
			EGS [Transmission control]	✓	✓	✓	✓	✓	-	
			EKPS [Fuel-pump control]	✓	✓	✓	✓	✓	-	
			GWS [Gear selector switch]	✓	✓	✓	✓	✓	-	
			DSC [Dynamic Stability Control]	✓	✓	✓	✓	✓	✓	
			EDC [Damper Control]	✓	✓	✓	✓	✓	-	
			EMF [Parking brake]	✓	✓	✓	✓	✓	-	
			EPS [Electronic Power Steering]	✓	✓	✓	✓	✓	-	
			RDC [Tyre pressure control]	✓	✓	✓	✓	✓	-	
			AMP [Amplifier]	✓	✓	✓	✓	✓	-	
			CA [Comfort Access system]	✓	✓	✓	✓	✓	-	
			CDC [CD Changer]	✓	✓	✓	✓	✓	-	
			CIC [Car Information Computer]	✓	✓	✓	✓	✓	-	
			CIC-GW [Gateway]	✓	✓	✓	✓	✓	-	
			CID [Central Information Display]	✓	✓	✓	✓	✓	-	
			CON [Controller]	✓	✓	✓	✓	✓	-	
			DVD-C [DVD Changer]	✓	✓	✓	✓	✓	-	
			DWA [Antitheft alarm system]	✓	✓	✓	✓	✓	-	
	FLA [High Beam Assist]	✓	✓	✓	✓	✓	-			
	FRM2 [Footwell Module 2]	✓	✓	✓	✓	✓	-			
FZD [Function Centre, Roof]	✓	✓	✓	✓	✓	-				



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions								
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions			
	Z4_E89	Body	IHKA [Integrated automatic heating/air conditioning]	✓	✓	✓	✓	✓	-			
IHKK [Integrated heating/air-conditioning regulation]			✓	✓	✓	✓	✓	-				
IHR [Integrated heater control]			✓	✓	✓	✓	✓	-				
INSTR [Instrument cluster]			✓	✓	✓	✓	✓	-				
JBE2 [Junction Box electronics 2]			✓	✓	✓	✓	✓	-				
M-ASK-BO [User interface]			✓	✓	✓	✓	✓	-				
M-ASK-GW [Gateway]			✓	✓	✓	✓	✓	-				
MRS [Multiple Restranint system]			✓	✓	✓	✓	✓	-				
NAV [Navigation system]			✓	✓	✓	✓	✓	-				
PDC [Park Distance Control]			✓	✓	✓	✓	✓	-				
RAD [Radio]			✓	✓	✓	✓	✓	-				
RAD2-BO [User interface]			✓	✓	✓	✓	✓	-				
RAD2-GW [Gateway]			✓	✓	✓	✓	✓	-				
RLSS [Rain/light solar sensor]			✓	✓	✓	✓	✓	-				
SINE [Siren and tilt sensor]			✓	✓	✓	✓	✓	-				
SMFA [Seat module, driver]			✓	✓	✓	✓	✓	-				
TCU [Telematic Control unit]			✓	✓	✓	✓	✓	-				
ULF [Universal charging and hands-free facility]			✓	✓	✓	✓	✓	-				
ULF-SBX [Interface box]			✓	✓	✓	✓	✓	-				
ULF-SBX-H [Interface box High]			✓	✓	✓	✓	✓	-				
VM [Video Module]	✓	✓	✓	✓	✓	-						
		Auto Scan										
		Auto Scan Fast										
		Service function	Maintenance			CBS reset	Engine oil	Microfilter	Front brake	Rear brake	Vehicle check	Spark plugs



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions						
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions	
Z8_E52 (1999 -)				Break Fluid						
				Vehicle inspection						
				Exhaust emission inspection						
				Diesel particle filter						
			Driver and Chassis	DME [Engine]	✓	✓	✓	✓	✓	-
				EGS [Transmission]	✓	✓	✓	✓	✓	-
				EWS [Electronic immobilize system]	✓	✓	✓	✓	✓	-
				ABS [Antilock brake]	✓	✓	✓	✓	✓	✓
				LEW [Steering-angle sensor]	✓	✓	✓	✓	✓	-
				RDC [Tyre pressure control]	✓	✓	✓	✓	✓	-
			Body	BIT [Basic Interface Telephone]	✓	✓	✓	✓	✓	-
				IHKA/IHKR [AC/heater]	✓	✓	✓	✓	✓	-
				IKE/IKI/KOMBI [Instrument cluster]	✓	✓	✓	✓	✓	-
				RAD [Radio]	✓	✓	✓	✓	✓	-
				SRS [Air bag]	✓	✓	✓	✓	✓	-
				URS [Rollover sensor]	✓	✓	✓	✓	✓	-
				ZKE [Central body electronic]	✓	✓	✓	✓	✓	-
				Auto Scan						
				Auto Scan Fast						
			Reset service interval indicator	[Oil service]						
				[Inspection]						
[Time interval]										
[Correct follow-on service]										
	[Display service interval status]									
Driver and Chassis	DDE [Diesel Electronics]	✓	✓	✓	✓	✓	-			
	DME [Engine]	✓	✓	✓	✓	✓	-			
	EGS [Transmission]	✓	✓	✓	✓	✓	-			
	EWS [Electronic immobilize system]	✓	✓	✓	✓	✓	-			
	ABS/ASC/DSC [Dynamic Stability Control]	✓	✓	✓	✓	✓	✓			



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
MINI_R50/R52/R53			LEW [Steering-angle sensor]	√	√	√	√	√	-
			RDC [Tyre pressure control]	√	√	√	√	√	-
			EHPS [Electrically assisted steering]	√	√	√	√	√	-
		Body	AIC [Automatic Interval Control]	√	√	√	√	√	-
			BM [On-board monitor]	√	√	√	√	√	-
			CVM [Convertible-top module]	√	√	√	√	√	-
			IHKA/IHKR [AC/heater]	√	√	√	√	√	-
			IKE/IKI/KOMBI [Instrument cluster]	√	√	√	√	√	-
			MFL [Multi-function steering wheel]	√	√	√	√	√	-
			NAV [Navigation system]	√	√	√	√	√	-
			PDC [Park Distance Control]	√	√	√	√	√	-
			RAD [Radio]	√	√	√	√	√	-
			SHD [Sliding/tilting sunroof]	√	√	√	√	√	-
			SRS [Air bag]	√	√	√	√	√	-
			ZKE [Central body electronic]	√	√	√	√	√	-
			Auto Scan						
		Auto Scan Fast							
		Service function	Reset service interval indicator						
		Programming,Coding ,Service	R50_COOPER_2002	Service functions		ABS/ASC/DSC			
				Reset service interval indicator					
				Coding/Program		CODING (Recoding)		DSC	
						CAR KEY MEMORY		IKE ZKE	
		Driver and Chassis	CAS [Car Access System]	√	√	√	√	√	-
			DME [Digital Motor Electronics]	√	√	√	√	√	-
			EGS [Transmission control]	√	√	√	√	√	-
ABS/ASC/DSC [Dynamic Stability Control]	√		√	√	√	√	√		
EPS [Electronic Power Steering]	√		√	√	√	√	-		
RDC [Tyre pressure control]	√		√	√	√	√	-		

Series	Chassis	Module	ECU System	Funtions					
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions
MINI SERIES	MINI_R55/R56	Body	AHM [Trailer module]	√	√	√	√	√	-
			AMP [Hi-Fi amplifier]	√	√	√	√	√	-
			CA [Comfort Access system]	√	√	√	√	√	-
			CCC-A [Applications]	√	√	√	√	√	-
			CCC-ANT [Aerial tuner]	√	√	√	√	√	-
			CCC-ASK [Audio system controller]	√	√	√	√	√	-
			CCC-BO [User interface]	√	√	√	√	√	-
			CCC-GW [Gateway]	√	√	√	√	√	-
			CDC [CD Changer]	√	√	√	√	√	-
			CID [Central Information Display]	√	√	√	√	√	-
			CVM [Convertible-top module]	√	√	√	√	√	-
			FBZM [rear compartment, control centre, center console]	√	√	√	√	√	-
			FRM [Footwell Module]	√	√	√	√	√	-
			IHKA [Integrated automatic heating/air conditioning]	√	√	√	√	√	-
			IHS [Integrated heating control]	√	√	√	√	√	-
			IHKS [Integrated heating/air-conditioning control]	√	√	√	√	√	-
			INSTR [Instrument cluster]	√	√	√	√	√	-
			JBE [Junction-box electronics]	√	√	√	√	√	-
			JNAV [Navigation system, Japan]	√	√	√	√	√	-
			MJOR Controller	√	√	√	√	√	-
			MRS [Multiple Restranint system]	√	√	√	√	√	-
			PDC [Park Distance Control]	√	√	√	√	√	-
			RAD [Radio]	√	√	√	√	√	-
			RAD2-BO [User interface]	√	√	√	√	√	-
			RAD2-GW [Gateway]	√	√	√	√	√	-
			SDARS [Satellite tuner]	√	√	√	√	√	-
SHD [Sliding/tilting sunroof]	√	√	√	√	√	-			
SZL [Switch center, steering column]	√	√	√	√	√	-			
ULF-SBX [Interface box]	√	√	√	√	√	-			



FCAR F3 Diagnosis list

Automaker:	BMW
Software Version:	V7.9

Series	Chassis	Module	ECU System	Funtions							
				Sys. Info.	Read code	Clear code	Data Stream	Actuation	Special Functions		
			ULF-SBX-H [Interface box High]	√	√	√	√	√	-		
			VM [Video Module]	√	√	√	√	√	-		
		Auto Scan									
		Auto Scan Fast									
		Service function	Maintenance	CBS reset	Engine oil						
					Microfilter						
					Front brake						
					Rear brake						
					Vehicle check						
					Spark plugs						
					Break Fluid						
					Vehicle inspection						
		Programming,Coding ,Service	R56_Unit_Coding	ZGM/SGM/JBBF [Safety and Gateway Module]							
				SIM/SGM/ACSM [Safety And Information]							
				SZL [Switch center steering column]							
CAS [Car Access System]											
INSTR [Instrument cluster]											
KBM/FRM [Base Body Module]											
KLIMA [Climate Module]											

Note: √ means the system have this functon, - means no