



FCAR F3 Diagnosis list

Automaker: SUBARU
Software Version: V6.3

Vehicle selection	Systems	Functions							
		Sys. Info.	Read code	D-Check code	History code	Clear code	Data stream	Actuation	Special functions
All other models	Engine Control System	-	√	√	√	√	√	-	-
	Transmission Control System	-	√	√	√	√	√	-	-
	Brake Control System	-	√	-	-	√	√	-	-
	Airbag System	-	√	-	√	√	√	-	-
	Tire pressure monitor	-	√	-	√	√	√	-	-
	Integ. Unit Mode	-	√	-	-	√	√	-	-
	CAN system	-	√	-	-	√	-	-	-
	Air Condition System	-	√	-	√	√	√	-	-
	Power steering system	-	√	-	-	√	√	-	-
	Keyless access system	-	√	-	√	√	√	-	-
	Automatic Light and Wiper system	-	-	-	-	-	√	-	-
	Combination Meter	-	√	-	√	√	-	-	-
	Auto Start Stop	-	√	-	√	√	-	-	-
	Automatic Headlight Leveling System	-	√	-	√	√	-	-	-
Multi-function display	-	√	-	√	√	-	-	-	
Inspection of BRZ	Engine Control System	-	√	-	√	√	√	-	-
	Transmission Control System	-	√	-	√	√	√	-	-
	Brake Control System	-	√	-	-	√	√	-	-
	Airbag System	-	√	-	√	√	√	-	-
	Tire pressure monitor	-	√	-	√	√	√	-	-
	Integ. Unit Mode	-	√	-	√	√	√	-	-
	Occupant Detection System	-	√	-	√	√	√	-	-
	Air Condition System	-	√	-	√	√	√	-	-
	Power Steering System	-	√	-	√	√	√	-	-
	Keyless access system	-	√	-	√	√	√	-	-
	Combination Meter	-	√	-	√	√	√	-	-
	Power Window	-	√	-	√	√	√	-	-
	Remote control starter	-	-	-	-	√	√	-	-
OLD PROTOCOL SYSTEM	Engine Control System	-	√	√	√	√	√	-	-
	Transmission Control System	-	√	√	√	√	√	-	-
	Brake Control System	-	√	-	-	√	√	-	Function Check Sequence
	Cruise Control System	-	√	-	-	-	√	-	-

Remarks: √ means the system has this function - means not supported at this moment.